

DUBUgcbJWHY`Yd\cbY`GngHYa g

Panasonic KX-T123220, KX-T123230, KX-T123250



www.voicesonic.com

Phone: 877-289-2829

Station User Guide

 
Panasonic KX-T123220, KX-T123230, KX-T123250, KX-T123211D, T123220, T123230, T123250, T123211D

STATION USER GUIDE


The KX-T123220, KX-T123230 and KX-T123250 can be connected to the KX-T123211D.
Additional features will be provided with KX-T123220, KX-T123230 and KX-T123250 by this connection.
Use this Station User Guide with Operating Instructions of the KX-T123220, KX-T123230 and KX-T123250.
In this guide, the Model No. KX-T123211D is abbreviated to KX-T123211.



KX-T123220

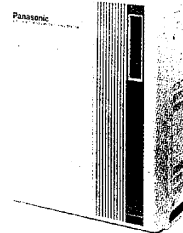

KX-T123211D

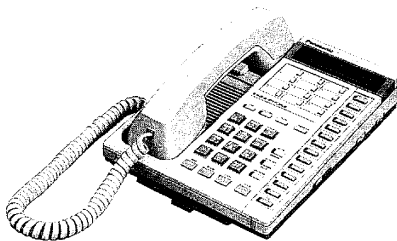 

KX-T123230



KX-T123250

Panasonic
EASA-PHONE

When a Line is Busy

 
Executive Override (Barge-In) – into CO

Allows an extension or CO line user to intrude into a CO line in use. This feature is required to be set beforehand in the KX-T123211.

For programming, see page 3-74 in the INSTALLATION MANUAL.



Lift handset
or press
SP-PHONE



Press CO
in which you
want to intrude.

[A 3-party
conference is now
established.]

- If the other party is setting "Data Line Security", you can not intrude into the other party that is in conversation.

Paging

Paging All Extensions and External

 
Allows paging to all extensions and external paging equipment.

The page can be heard from the proprietary telephones (KX-T123230, KX-T123220, KX-T123250 or KX-T123235 etc.) and external paging equipment.


■ To access



Lift handset
or press
SP-PHONE



Dial "33 *"

 

Confirmation
tone of 1 beep
will be heard



Page



Wait for an
answer and talk

- Paging will be heard from the built-in speaker and external paging equipment (1 and/or 2).



1

and



2

- You may dial 32* instead of 33*.

Use of Other Features

 
Electronic Station Lock

Locking an extension prohibits another user from dialing on an outside line until unlocked.


■ To lock




Lift handset or press SP-PHONE




Dial "77"

 

Dial lock code (000 through 999)

 

Dial same lock code again

 

Dial "#"

 


Hang up or press SP-PHONE


■ To unlock




Lift handset or press SP-PHONE



Dial "77"

 

Dial lock code

 

Dial "#"



Hang up or press SP-PHONE

- Lock code must be 3 numeric digits, excluding the "# " and "* " buttons.
- If you forget the Lock code, see the "Cancellation of Electronic Station Lock" on page 4.

Station Status Check

 
You can confirm your station status on the LCD.

- Be sure the handset is in the cradle and the SP-PHONE button is off.

■ To confirm

Press the following button(s) which you want to confirm.

■ Proprietary Telephone




Press REDIAL




Press SAVE



 
Press PROGRAMMABLE FEATURE



Press FWD/DND

 


Press MESSAGE

 


Press CO

 ■ DSS Console



Press DSS

 

Press PROGRAMMABLE FEATURE

- When the display of the contents stored exceeds 17 characters, the mark "&" will be displayed at the right end of the LCD.

Use of Other Features (cont.)

 
Timed Reminder

If a time is set, an Alarm tone will sound at the preset time.


■ Setting



Lift handset
or press
SP-PHONE



Dial "76"

 

Enter
hour
(01 through 12)

 
Enter
minutes
(00 through 59)



Dial
"0" or "1"
["0" : for AM
"1" : for PM]



Dial
"1" or "2"
["1" : only one day
"2" : every day]



Dial "#"

 


Hang up or
press
SP-PHONE

■ To cancel



Lift handset
or press
SP-PHONE




Dial "762#"

- After cancelling, hang up or press SP-PHONE.

■ To confirm the setting time



 Lift handset
or press
SP-PHONE



Dial "763#"

- After confirming, hang up or press SP-PHONE.
- Confirmation can be done only with the KX-T123230 equipped with LCD.

 
Station Programming

Cancellation of Electronic Station Lock (Extension of jack number 01 only)


You can cancel the Electronic Station Lock on all extensions.

This feature only is done through extension connected to jack number 01.

- Set the MEMORY switch of the KX-T123230 to “PROGRAM”.



Dial “8”

 

Press
MEMORY

- After canceling the Electronic Station Lock, return the MEMORY switch to the “SET” position.

Outgoing Message (Extension of jack number 01 only)

 
Enables recording of a message that answers calls on the CO line set to “DISA” mode.

The record time is max. 31 seconds.

One message can be recorded.

- Set the MEMORY switch of the KX-T123230 to “PROGRAM”.


To record



Dial “9”



 
Lift handset



Dial “2”



 Give
message




Press
MEMORY

- Message which is recorded is played back automatically.

To play back only



 Dial “9”



Dial “1”



Will hear
message

- After recording or confirming, return the MEMORY switch to the “SET” position.
- Optional Outgoing Message Card and Direct Inward System Access Cards are necessary.
- If a power failure takes place for about 10 days, OGM will vanish. Then, “Record OGM” will be displayed and blink on the LCD of the extension connected to jack no.1. Please record OGM again.



See More
Panasonic Manuals



www.voicesonic.com
Phone: 877-289-2829