

Panasonic®

PT Programming Manual

Hybrid IP-PBX

Model No. KX-TDA50/KX-TDA100
KX-TDA200/KX-TDA600



Thank you for purchasing a Panasonic Hybrid IP-PBX.
Please read this manual carefully before using this product and save this manual for future use.

KX-TDA50: PSMPR Software File Version 5.0000 or later
KX-TDA100/KX-TDA200: PMPR Software File Version 5.0000 or later
KX-TDA600: PLMPR Software File Version 5.0000 or later

Document Version: 2008-11

Introduction

About this Programming Manual

The PT Programming Manual is designed to serve as a reference to programming the Panasonic Hybrid IP-PBX using a Panasonic proprietary telephone (PT) with display.

The PT Programming Manual is divided into the following sections:

Section 1, Overview

Provides an overview of programming the PBX.

Section 2, PT Programming

Serves as reference operating instructions when using a display PT to program the PBX.

Section 3, Appendix

Provides a list of all related PT programming items for each feature as Feature Programming References.

References Found in the PT Programming Manual

PT Programming Manual References

Related sections of the PT Programming Manual are listed for your reference.

Feature Manual References

The Feature Manual explains what the PBX can do, as well as how to obtain the most of its many features and facilities. Sections from the Feature Manual are listed throughout the PT Programming Manual for your reference.

Links to Other Pages and Manuals

If you are viewing this manual with a PC, certain items are linked to different sections of the PT Programming Manual and other Hybrid IP-PBX manuals. Click on a link to jump to that section.

Linked items include:

- [PT Programming Manual References](#)
- [Feature Manual References](#)

Safety Notices

Please observe the safety notices in this manual in order to avoid danger to users or other people, and prevent damage to property.

The notices are classified as follows, according to the severity of injury or damage:

<u>WARNING</u>	This notice means that misuse could result in death or serious injury.
<u>CAUTION</u>	This notice means that misuse could result in injury or damage to property.

WARNING

Unplug the PBX from the AC outlet if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorized Panasonic Factory Service Center.

NOTES

- The contents of this manual apply to PBXs with a certain software version, as indicated on the cover of this manual. To confirm the software version of your PBX, see **[190] Main Processing (MPR) Software Version Reference**.
- Some optional service cards, PTs, and features are not available in some areas. Additionally, some optional service cards and features are not available for some PBX models. Please consult your certified Panasonic dealer for more information.
- Product specifications are subject to change without notice.
- In this manual, model number suffixes (e.g., KX-TDA50**G**) are omitted unless necessary.

Table of Contents

1	Overview	9
1.1	Introduction	10
1.1.1	Introduction	10
1.1.2	Password Security	11
1.1.3	Entering Characters	12
2	PT Programming	15
2.1	PT Programming	16
2.1.1	Programming Instructions	16
2.1.2	Maximum Values	18
2.1.3	Basic Programming	20
	[000] Date & Time	20
	[001] System Speed Dialing Number	20
	[002] System Speed Dialing Name	20
	[003] Extension Number	21
	[004] Extension Name	21
	[005] Extension Personal Identification Number (PIN)	21
	[006] Operator Assignment	21
	[007] DSS Console Paired Telephone	21
	[008] Absent Message	22
2.1.4	System Management Programming	22
	[100] Flexible Numbering	22
	[101] Time Service Switching Mode	22
	[102] Time Service Starting Time	23
	[103] Idle Line Access (Local Access)	23
	[110] System Password for Administrator—for PT Programming	23
	[111] System Password for User—for PT Programming	23
	[112] Manager Password	23
	[120] Verification Code	24
	[121] Verification Code Name	24
	[122] Verification Code Personal Identification Number (PIN)	24
	[123] Verification Code COS Number	24
	[190] Main Processing (MPR) Software Version Reference	24
2.1.5	Timer Programming	25
	[200] Hold Recall Time	25
	[201] Transfer Recall Time	25
	[203] Intercept Time	25
	[204] Hot Line Waiting Time	25
	[205] Automatic Redial Repeat Times (KX-TDA100/KX-TDA200/KX-TDA600 only)	25
	[207] Door Unlock Time	25
	[208] Call Duration Count Starting Time for LCOT	26
	[209] DISA Delayed Answer Time	26
	[210] DISA CO-to-CO Line Call Prolong Time	26
	[211] DISA Intercept Time	26
2.1.6	TRS/ARS Programming	26
	[300] TRS Override by System Speed Dialing	26
	[301] TRS Denied Code	26
	[302] TRS Exception Code	27
	[303] Special Carrier Access Code	27
	[304] Emergency Number	27
	[320] ARS Mode	27

	[321] ARS Leading Number	27
	[322] ARS Routing Plan Table Number	27
	[325] ARS Exception Number	28
	[330] ARS Routing Plan Time Table	28
	[331–346] ARS Routing Plan Table (1–16) (KX-TDA50/KX-TDA100/KX-TDA200 only)	28
	[347] ARS Routing Plan Table (1–48) (KX-TDA600 only)	28
	[350] ARS Carrier Name	29
	[351] ARS Trunk Group for Carrier Access	29
	[352] ARS Removed Number of Digits for Carrier Access	29
	[353] ARS Carrier Access Code	29
2.1.7	CO Line Programming	29
	[400] LCOT CO Line Connection	29
	[401] LCOT CO Line Name	30
	[402] LCOT Trunk Group Number	30
	[409] LCOT CO Line Number Reference	30
	[410] LCOT Dialing Mode	30
	[411] LCOT Pulse Rate	30
	[412] LCOT DTMF Minimum Duration	30
	[413] LCOT CPC Signal Detection Time—Outgoing	31
	[414] LCOT CPC Signal Detection Time—Incoming	31
	[416] LCOT Pause Time	31
	[417] LCOT Flash/Recall Time	31
	[418] LCOT Disconnect Time	31
	[450] DIL 1:1 Destination	31
	[451] DID Number	32
	[452] DID Name	32
	[453] DID Destination	32
	[471] Host PBX Access Code	32
	[472] Extension-to-CO Line Call Duration	32
	[473] CO-to-CO Line Call Duration	32
	[475] DISA Silence Detection	33
	[476] DISA Continuous Signal Detection	33
	[477] DISA Cyclic Signal Detection	33
	[490] Caller ID Signal Type	33
2.1.8	COS Programming	34
	[500] Trunk Group Number	34
	[501] TRS Level	34
	[502] CO Line Call Duration Limitation	34
	[503] Call Transfer to CO Line	34
	[504] Call Forwarding to CO Line	34
	[505] Executive Busy Override	35
	[506] Executive Busy Override Deny	35
	[507] DND Override	35
	[508] Account Code Mode	35
	[509] TRS Level for System Speed Dialing	35
	[510] TRS Level for Extension Dial Lock	35
	[511] Manager Assignment	35
	[512] Permission for Door Open Access	36
	[514] Time Service Manual Switching	36
	[515] Wireless XDP Parallel Mode for Paired Telephone	36
	[516] Programming Mode Limitation	36
2.1.9	Extension Programming	37
	[600] EXtra Device Port (XDP) Mode	37
	[601] Terminal Device Assignment	37

	[602] Class of Service	37
	[603] Extension User Group	37
	[604] Extension Intercept Destination	38
	[605] Call Forwarding—No Answer Time	38
	[606] CLIP Number	38
	[620] Incoming Call Distribution Group Member	38
	[621] Incoming Call Distribution Group Delayed Ringing	38
	[622] Incoming Call Distribution Group Floating Extension Number	39
	[623] Incoming Call Distribution Group Name	39
	[624] Incoming Call Distribution Group Distribution Method	39
	[625] Destination for Overflow Time Expiration	39
	[626] Overflow Time	39
	[627] Destination When All Busy	40
	[628] Queuing Call Capacity	40
	[629] Queuing Hurry-up Level	40
	[630] Queuing Time Table	40
	[631] Sequences in Queuing Time Table	40
	[632] Maximum Number of Agents	41
	[640] Extension User Groups of a Paging Group	41
	[641] External Pagers of a Paging Group	41
	[650] Extension User Groups of a Pickup Group	41
	[660] VM Group Floating Extension Number	42
	[680] Idle Extension Hunting Type	42
	[681] Idle Extension Hunting Group Member	42
	[690] PS Registration	42
	[691] PS Termination	43
	[692] Personal Identification Number (PIN) for PS Registration	43
	[699] CS Status Reference	43
2.1.10	Resource/Interface Programming	43
	[700] External Pager Floating Extension Number	43
	[710] Music Source Selection for BGM (with the KX-TDA50)/BGM2 (with the KX-TDA100/KX-TDA200/KX-TDA600)	44
	[711] Music on Hold	44
	[712] Music for Transfer	44
	[720] Doorphone Call Destination	44
	[729] Doorphone Number Reference	45
	[730] Outgoing Message (OGM) Floating Extension Number	45
	[731] Outgoing Message (OGM) Name	45
	[732] DISA Security Mode	45
2.1.11	SMDR & Maintenance Programming	45
	[800] RS-232C Parameter—New Line Code	45
	[800] RS-232C Parameter—Baud Rate	46
	[800] RS-232C Parameter—Word Length	46
	[800] RS-232C Parameter—Parity Bit	46
	[800] RS-232C Parameter—Stop Bit Length	46
	[801] External Modem Control	46
	[802] SMDR Page Length	46
	[803] SMDR Skip Perforation	46
	[804] SMDR Outgoing Call Printing	47
	[805] SMDR Incoming Call Printing	47
	[810] Remote Programming	47
	[811] Modem Floating Extension Number	47
	[812] ISDN Remote Floating Extension Number (KX-TDA100/KX-TDA200/KX-TDA600 only)	47
2.1.12	Card Programming	47

[900] Slot Card Type Reference	47
[901] Slot Card Deletion	48
[902] Slot Card Reset	48
[910] OPB3 Option Card Type Reference (KX-TDA100/KX-TDA200/KX-TDA600 only)	48
[911] OPB3 Option Card Deletion (KX-TDA100/KX-TDA200/KX-TDA600 only)	48
3 Appendix	49
3.1 Revision History	50
3.1.1 KX-TDA100/KX-TDA200 PMPR Software File Version 3.2xxx	50
3.1.2 KX-TDA100/KX-TDA200 PMPR Software File Version 5.0xxx	50
3.1.3 KX-TDA50 PSMPR Software File Version 4.0xxx	50
3.1.4 KX-TDA50 PSMPR Software File Version 5.0xxx	50
3.2 Feature Programming References	51

Section 1

Overview

This section provides an overview of programming the PBX.

1.1 Introduction

1.1.1 Introduction

These programming instructions are designed to serve as an overall system programming reference for the Panasonic Hybrid IP-PBX. Each feature in the PBX has default settings that can be changed to customize the PBX to your requirements. These settings control the functions of the PBX, and changing them is referred to as "system programming".

Only one person can perform system programming at a time. Any other users trying to enter system programming mode will be denied access.

Ways to Program

There are two programming methods:

- **PC (Personal Computer) Programming**
All features and settings of the PBX can be programmed through PC programming with Maintenance Console. Installing and starting Maintenance Console are explained in the Installation Manual.
- **PT (Proprietary Telephone) Programming**
A subset of the features and settings of the PBX can be programmed using a PT. PT programming is described in Section 2.1 PT Programming. An extension user can perform system programming by entering three-digit programming numbers with a PT.

1.1.2 Password Security

To maintain system security, system passwords are required to access certain programming functions of the PBX. By giving different users access to different passwords, it is possible to control the amount of programming that each user is able to perform.

The following types of system passwords are available:

Password	Description	Format
System Password (PT) for User	Used to access user-level PT programming. The specific PT programming items that may be programmed at user level can be selected through system programming.	4 – 10 digits
System Password (PT) for Administrator	Used to access administrator-level PT programming. All PT programming settings are available.	

CAUTION

To the Administrator or Installer regarding the system password

1. Please provide all system passwords to the customer.
2. To avoid unauthorized access and possible abuse of the PBX, keep the passwords secret, and inform the customer of the importance of the passwords, and the possible dangers if they become known to others.
3. The PBX has default passwords preset. For security, change these passwords the first time that you program the PBX.
4. Change the passwords periodically.
5. It is strongly recommended that passwords of 10 numbers or characters be used for maximum protection against unauthorized access. For a list of numbers and characters that can be used in system passwords, refer to Section 1.1.3 Entering Characters.
6. If a system password is forgotten, it can be found by loading a backup of the system data into a PC, and checking the password using the Maintenance Console software. If you do not have a backup of the system data, you must reset the PBX to its factory defaults and reprogram it. Therefore, we strongly recommend maintaining a backup of the system data. For more information on how to back up the system data, refer to the on-line help of the Maintenance Console. However, as system passwords can be extracted from backup copies of the system data file, do not allow unauthorized access to these files.

1.1.3 Entering Characters

The following characters can be used when storing a name, message, or other text entry data using a PT. The tables below show you the characters available by pushing each button a specific number of times.

Table 1 (Standard mode)


Times Buttons	1	2	3	4	5	6	7	8	9
1	!	?	"	1					
2	A	B	C	a	b	c	2		
3	D	E	F	d	e	f	3		
4	G	H	I	g	h	i	4		
5	J	K	L	j	k	l	5		
6	M	N	O	m	n	o	6		
7	P	Q	R	S	p	q	r	s	7
8	T	U	V	t	u	v	8		
9	W	X	Y	Z	w	x	y	z	9
0	(space)	.	,	'	:	;	0		
*	/	+	-	=	<	>	*		
#	\$	%	&	@	()	€	£	#


 
Table 2 (Option mode)

Times Buttons	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	!	?	"	ä	ö	ü	1								
2	A	B	C	a	b	c	À	Á	Â	Ã	Ä	Å	Æ	Ç	2
3	D	E	F	d	e	f	Ð	È	É	Ê	Ë	3			
4	G	H	I	g	h	i	Ì	Í	Î	Ï	4				
5	J	K	L	j	k	l	5								
6	M	N	O	m	n	o	Ñ	Ò	Ó	Ô	Õ	Ö	Ø	Œ	6
7	P	Q	R	S	p	q	r	s	Š	ß	7				
8	T	U	V	t	u	v	Û	Ú	Û	Ü	8				
9	W	X	Y	Z	w	x	y	z	Ý	Ž	9				
0	(space)	.	,	'	:	;	0								
*	/	+	-	=	<	>	*								
#	\$	%	&	@	()	€	£	#						

[Example of Entering Characters]

To enter "Ann":

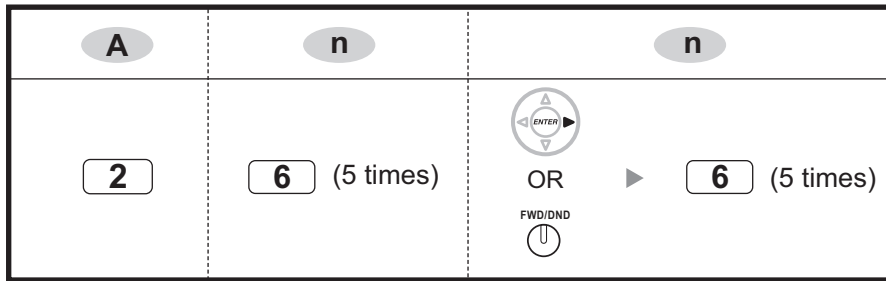**Note**

- To erase the character on the cursor, press CLEAR.
- To move the cursor to the left, press .
- To move the cursor to the right, press . When entering two or more characters that use the same button consecutively (e.g. "G" and "I"), you must press this button or the FWD/DND button after entering the first character.
- If SELECT is pressed, the characters for each button will be displayed in reverse order.
- To toggle between Table 1 and Table 2 when using the KX-NT300/KX-DT300/KX-T7600 series, press the leftmost soft button.

Section 2

PT Programming

This section serves as reference operating instructions when using a display PT to program the PBX.

2.1 PT Programming

2.1.1 Programming Instructions

Required Telephone/Extension


 
 

 




PBX settings can be customized through system programming by using a proprietary telephone (PT) with a multiline display, such as the KX-NT343 or KX-DT346. To access system programming, the Class of Service (COS) assigned to the PT's extension must be programmed to allow system programming, or the PT must be connected to the lowest-numbered port on the card installed in the lowest-numbered slot.

Only one system programming session can be performed at a time. This means that only one user can access system programming at a time, whether through a PT or PC.

For a list of characters that can be entered during system programming, see Section 1.1.3 Entering Characters.

Buttons and Functions

Fixed Buttons			Function
KX-NT300/KX-DT300	KX-NT136/KX-T7600	KX-T7200/KX-T7400*1	
			PREVIOUS
			NEXT
			 (Page up)
			 (Page down)
			ENTER
			Back to Previous Menu (CANCEL)
			SHIFT
			PROGRAM
			END
			SELECT

Fixed Buttons			Function
KX-NT300/KX-DT300	KX-NT136/KX-T7600	KX-T7200/KX-T7400 ^{*1}	
			FLASH
			CLEAR
			SECRET

*1 The buttons shown in this column are from the KX-T7400 series.


Entering System Programming Mode

Using a PT to perform system programming allows an authorized extension user to set a wide range of PBX features and parameters.

There are two levels of system programming that can be performed with a PT: administrator-level programming and user-level programming.


Administrator Level:

Allows the programming of all settings accessible through PT programming.

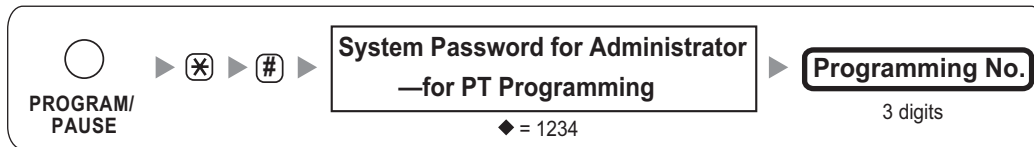

User Level:

Allows the programming of limited settings as permitted through PC programming.

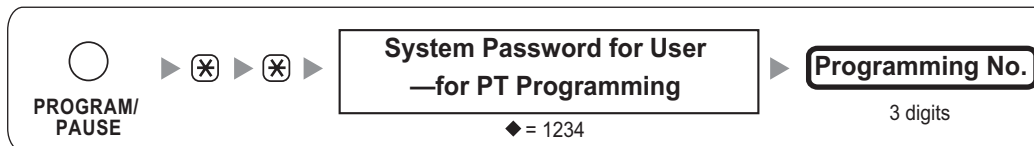

Note

◆ means default value throughout this manual.


Programming Structure

Programming Number	Programming Group Title	Description
[0XX]	Basic Programming	Frequently used programming steps
[1XX]	System Management Programming	Global system parameters
[2XX]	Timer Programming	System timers

Programming Number	Programming Group Title	Description
[3XX]	TRS/ARS Programming	TRS and Automatic Route Selection (ARS) programming
[4XX]	CO Line Programming	CO line and trunk group settings
[5XX]	COS Programming	Class of Service parameters
[6XX]	Extension Programming	Extension feature settings
[7XX]	Resource/Interface Programming	PBX interface and external device settings
[8XX]	SMDR & Maintenance Programming	Station Message Detail Recording (SMDR) and maintenance feature settings
[9XX]	Card Programming	Used to display the cards currently installed in the PBX, or to "delete" a card from system programming before physically removing it.

2.1.2 Maximum Values

Throughout this manual, maximum entry values are shown for each programming item. When maximum entry values for one or more of the supported PBX models differ, these differences are listed within the programming item, as shown in the example below.

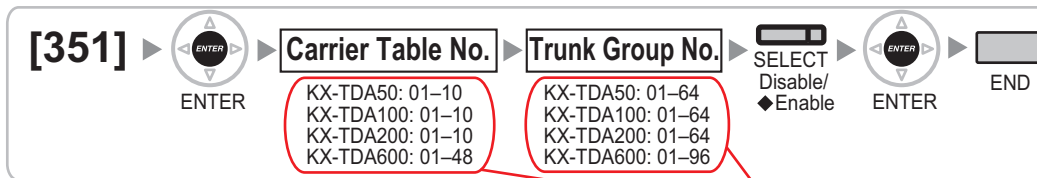

These values vary by PBX model

However, please note that extension number, slot and port entry values are not listed within each programming item. These values vary depending on the model of PBX and the card type installed, as shown below.

Extension Numbers

All models: 1–5 digits

Feature Numbers

All models: 1–4 digits

KX-TDA50 Slot and Port Values

Available Slot Entry Values

Slot Number	Supported Cards
01	Pre-installed Super Hybrid Ports
02–04	DLC4, HLC4, PLC4, LCOT4 cards

Slot Number	Supported Cards
05–07	DLC8, PLC8, SLC8 cards
08–09	DPH4 card

Enter slot numbers as two-digit numbers (e.g. "04" for slot 4).

Available Port Entry Values

Card Type	Port Number	Related Programming
DLC4	01–04	[600] [601]
HLC4	01–04	
PLC4	01–04	
DLC8	01–08	
PLC8	01–08	
DPH4	01–04	[72x]
LCOT4	01–04	[40x] [41x] [450]
Pre-installed Super Hybrid Ports	01–04	[600] [601]

Enter values as two-digit numbers (e.g. "04" for port 4).

KX-TDA100/KX-TDA200/KX-TDA600 Slot and Port Values

Available Slot Entry Values

KX-TDA100/KX-TDA200

PBX Model	Slot Number	Supported Cards
KX-TDA100	01–06	All cards
KX-TDA200	01–11	

Enter slot numbers as two-digit numbers (e.g. "04" for slot 4).

KX-TDA600

Slot Number	Supported Cards
101–110	All cards
201–211	
301–311	
401–411	

Enter slot numbers as three-digit numbers of the form "XYX":

- X: Shelf number (1-4)
- YY: Slot number (01-11)

Available Port Entry Values


Card Type	Port Number	Related Programming
DHLC8	01–08	[600] [601]
DLC8	01–08	
DLC16	01–16	
DPH4	11–34 ¹	[72x]
LCOT8 (KX-TDA100/KX-TDA200 only)	01–08	[400] [409] [41x] [450]
LCOT16 (KX-TDA100/ KX-TDA200 only)	01–16	
ELCOT16 (KX-TDA600 only)	01–16	

Enter values as two-digit numbers (e.g. "04" for port 4).


¹ Enter card number and port number as single-digit numbers (e.g. "34" for card 3, port 4).

2.1.3 Basic Programming


[000] Date & Time

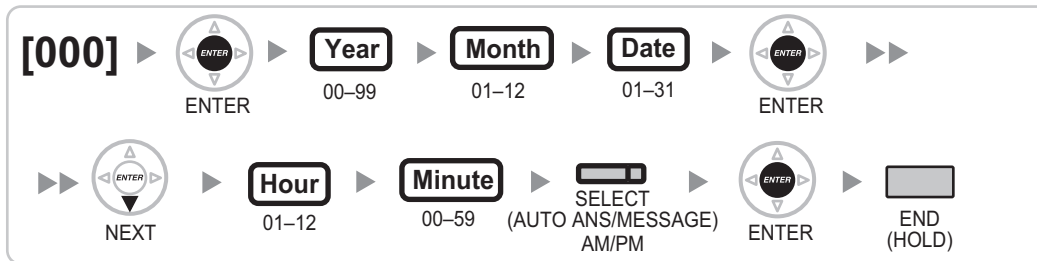


[001] System Speed Dialing Number

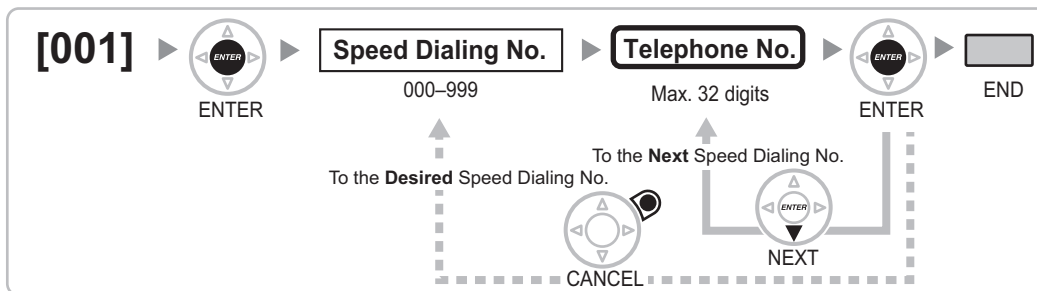

[002] System Speed Dialing Name

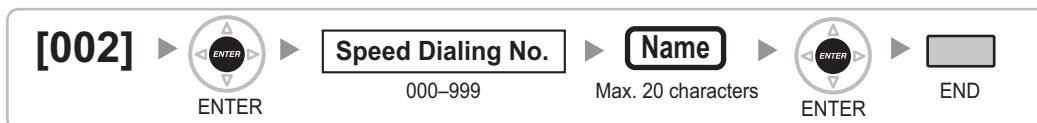

[003] Extension Number

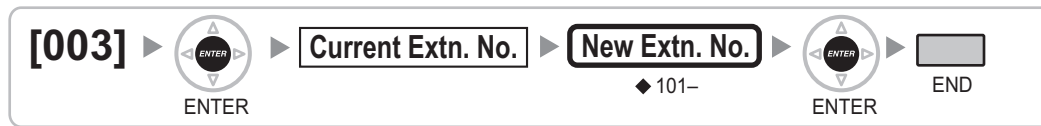

Note

- Extension numbers of PSs can be a maximum of 4 digits.
- If PC Phone, PC Console, or a CTI application is running on a PC connected to an extension whose extension number is to be programmed/modified, quit the application first.

[004] Extension Name



[005] Extension Personal Identification Number (PIN)



CAUTION

There is a risk that fraudulent telephone calls will be made if a third party discovers a personal identification number (PIN) (verification code PIN or extension PIN) of the PBX.

The cost of such calls will be billed to the owner/renter of the PBX.


To protect the PBX from this kind of fraudulent use, we strongly recommend:

- Keeping PINs secret.
- Selecting complex, random PINs that cannot be easily guessed.
- Changing PINs frequently.

[006] Operator Assignment




[007] DSS Console Paired Telephone

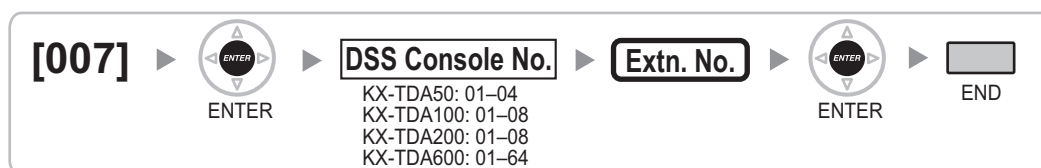

Note

This program is only available after the port connected to the DSS Console is assigned as "DSS Console" in [601] Terminal Device Assignment.
 If one or more SDN buttons have been set at the DSS Console, they must be deleted before this setting can be changed (KX-TDA100/KX-TDA200/KX-TDA600 only).


[008] Absent Message

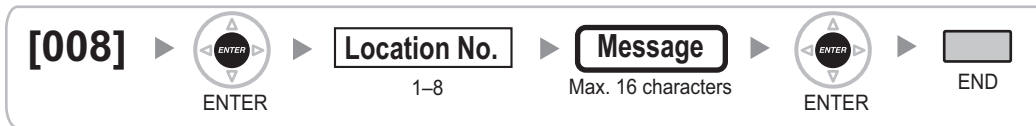

For default values, see "1.1.1 Absent Message" in the Feature Manual.


2.1.4 System Management Programming

[100] Flexible Numbering

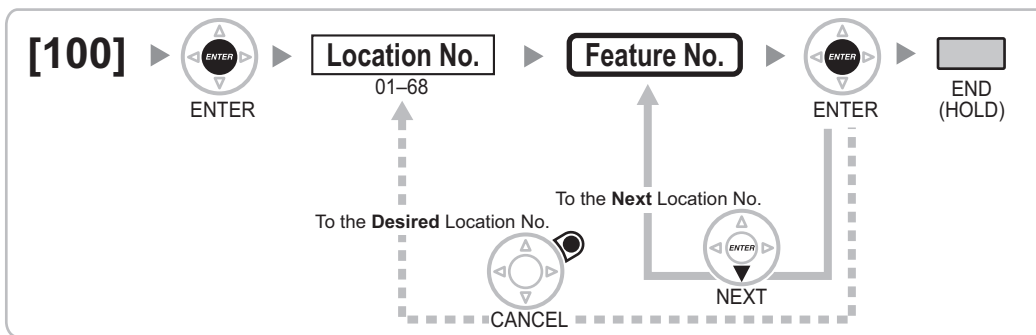


For default values, see "6.1.4 Flexible Numbering/Fixed Numbering" in the Feature Manual.


[101] Time Service Switching Mode

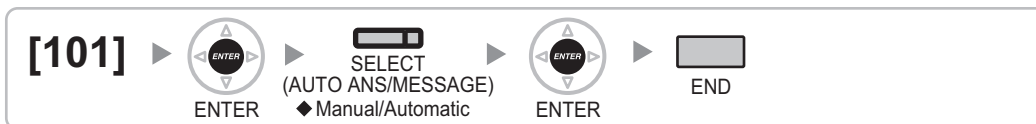

[102] Time Service Starting Time

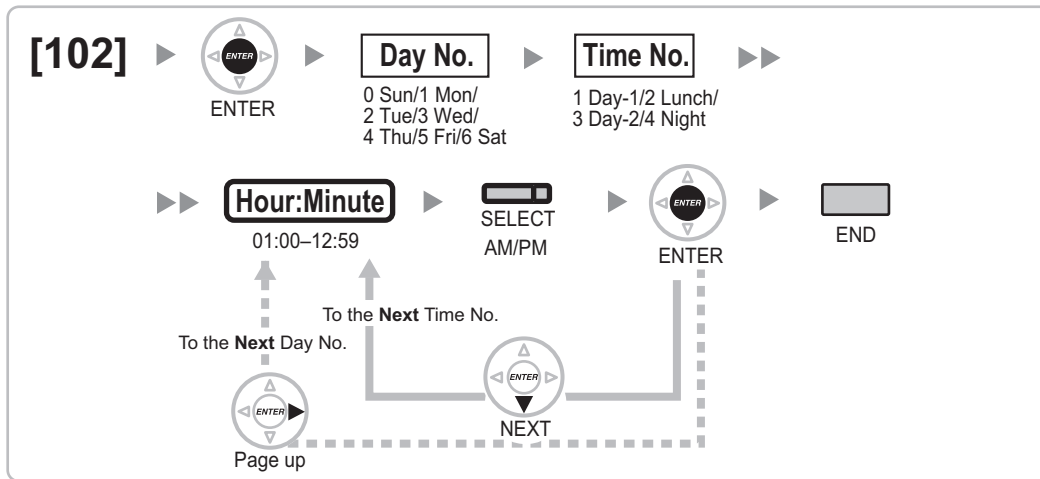

[103] Idle Line Access (Local Access)

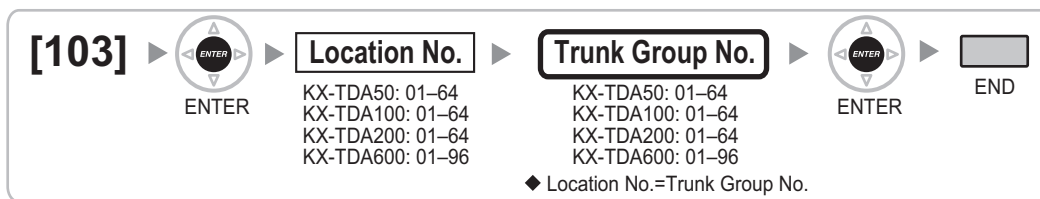

[110] System Password for Administrator—for PT Programming



[111] System Password for User—for PT Programming



[112] Manager Password



[120] Verification Code



[121] Verification Code Name



[122] Verification Code Personal Identification Number (PIN)



CAUTION

There is a risk that fraudulent telephone calls will be made if a third party discovers a personal identification number (PIN) (verification code PIN or extension PIN) of the PBX.

The cost of such calls will be billed to the owner/renter of the PBX.

To protect the PBX from this kind of fraudulent use, we strongly recommend:

- a. Keeping PINs secret.
- b. Selecting complex, random PINs that cannot be easily guessed.
- c. Changing PINs frequently.

[123] Verification Code COS Number



[190] Main Processing (MPR) Software Version Reference



2.1.5 Timer Programming


[200] Hold Recall Time



[201] Transfer Recall Time




[203] Intercept Time

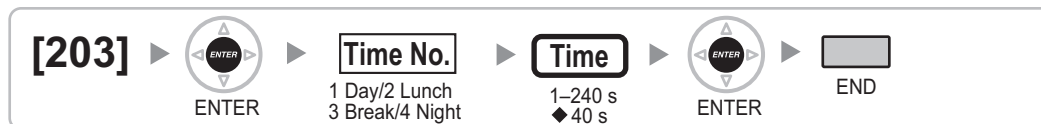

[204] Hot Line Waiting Time




[205] Automatic Redial Repeat Times (KX-TDA100/KX-TDA200/KX-TDA600 only)

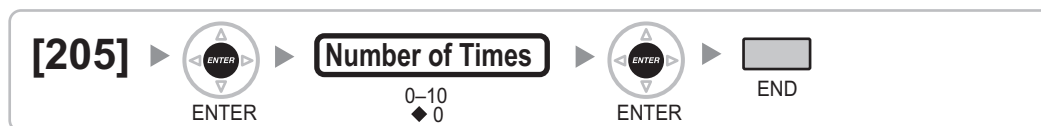

[207] Door Unlock Time



[208] Call Duration Count Starting Time for LCOT

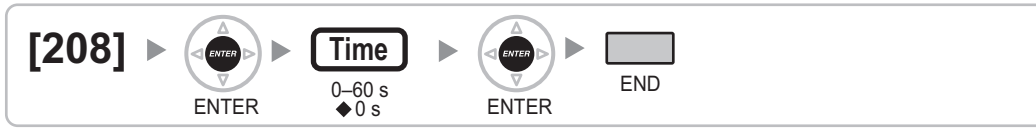


[209] DISA Delayed Answer Time



[210] DISA CO-to-CO Line Call Prolong Time




[211] DISA Intercept Time

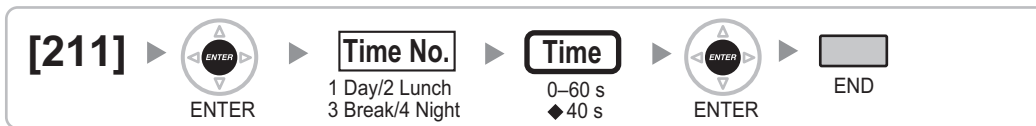


2.1.6 TRS/ARS Programming


[300] TRS Override by System Speed Dialing

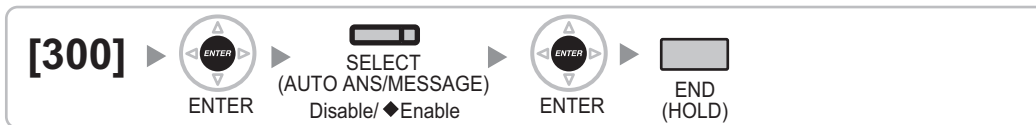


[301] TRS Denied Code

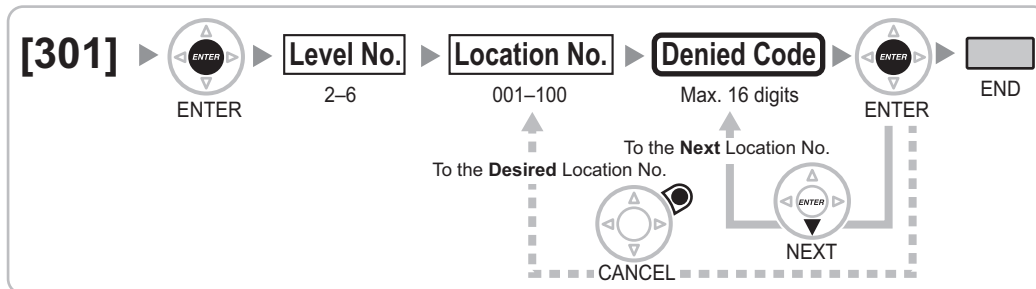


[302] TRS Exception Code

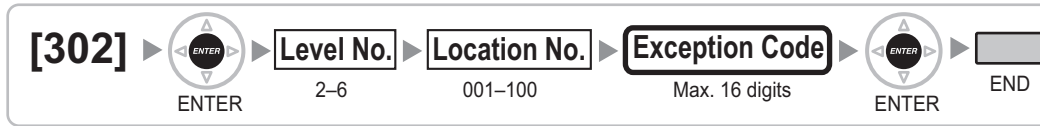

[303] Special Carrier Access Code

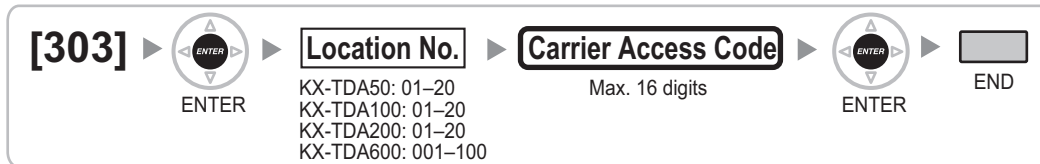

[304] Emergency Number

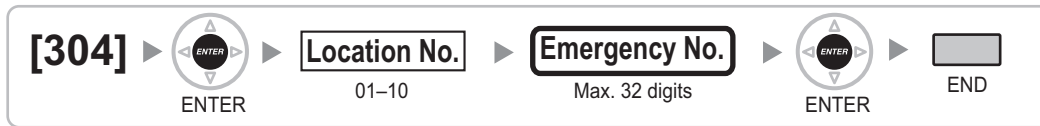


[320] ARS Mode



[321] ARS Leading Number




[322] ARS Routing Plan Table Number

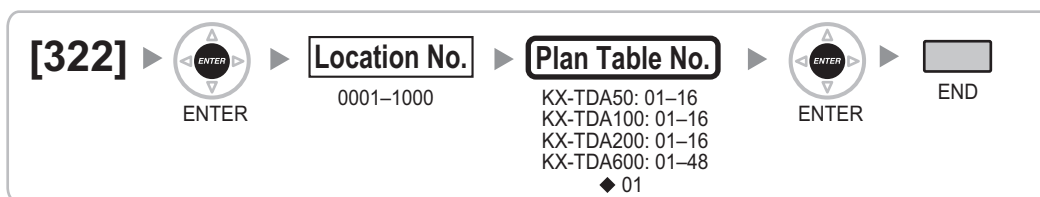


[325] ARS Exception Number



[330] ARS Routing Plan Time Table

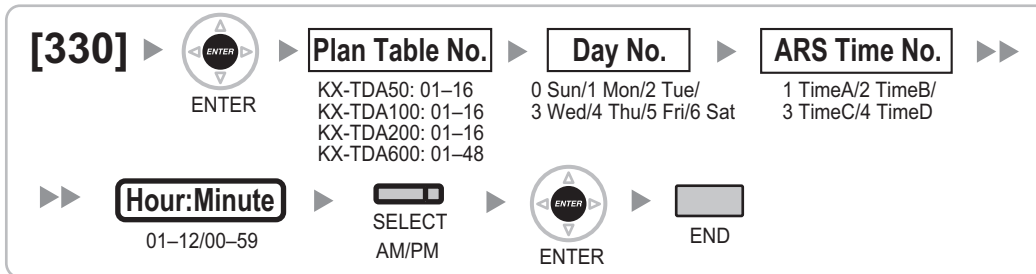


[331-346] ARS Routing Plan Table (1-16) (KX-TDA50/KX-TDA100/KX-TDA200 only)

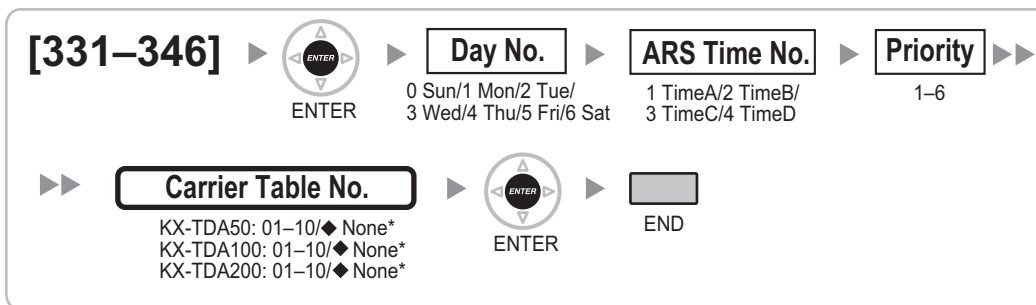


- For programs [331] to [340], when Priority 1 is selected, the default value of Carrier Table No. is as follows:
 [331]: 01, [332]: 02, [333]: 03, [334]: 04, [335]: 05,
 [336]: 06, [337]: 07, [338]: 08, [339]: 09, [340]: 10


[347] ARS Routing Plan Table (1-48) (KX-TDA600 only)

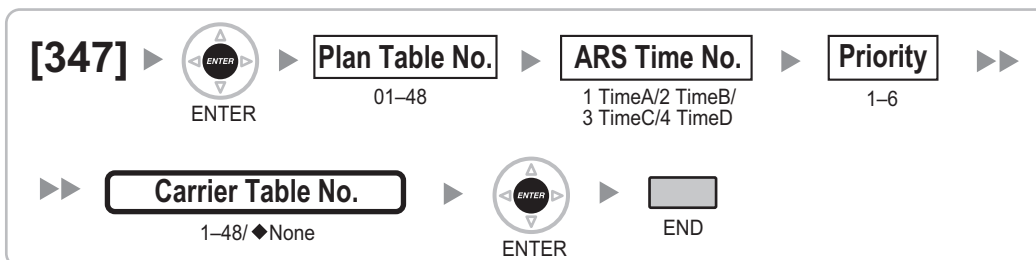


[350] ARS Carrier Name

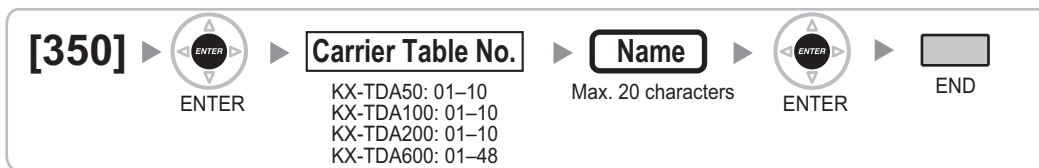


[351] ARS Trunk Group for Carrier Access

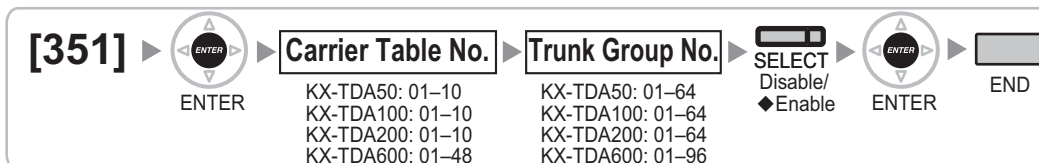

[352] ARS Removed Number of Digits for Carrier Access

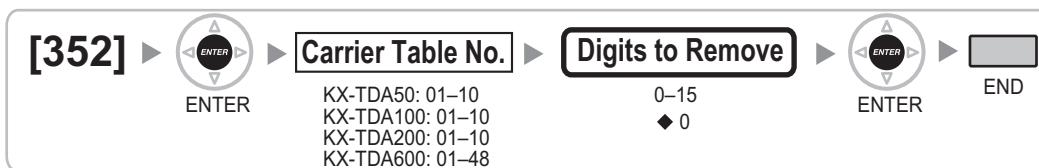


[353] ARS Carrier Access Code

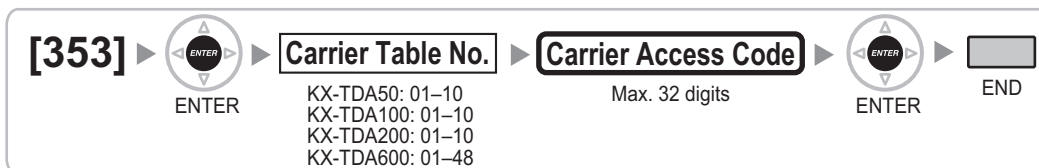

2.1.7 CO Line Programming


[400] LCOT CO Line Connection

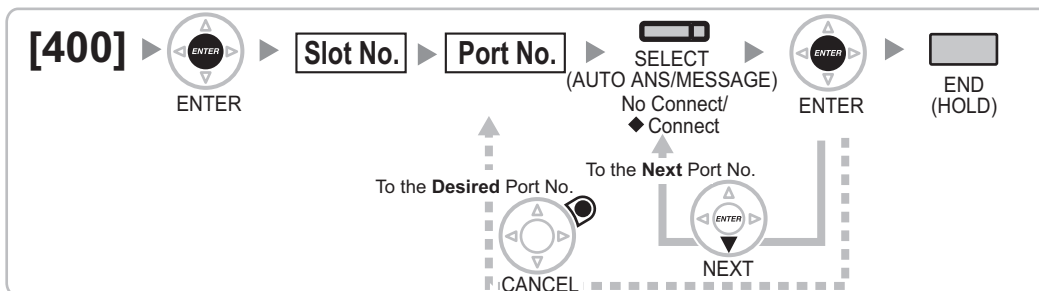

[401] LCOT CO Line Name




[402] LCOT Trunk Group Number

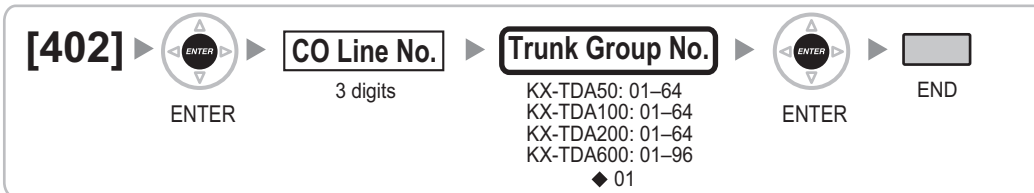

[409] LCOT CO Line Number Reference



[410] LCOT Dialing Mode

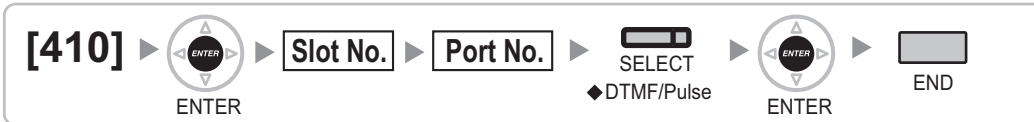

[411] LCOT Pulse Rate



[412] LCOT DTMF Minimum Duration




[413] LCOT CPC Signal Detection Time—Outgoing




[414] LCOT CPC Signal Detection Time—Incoming



[416] LCOT Pause Time

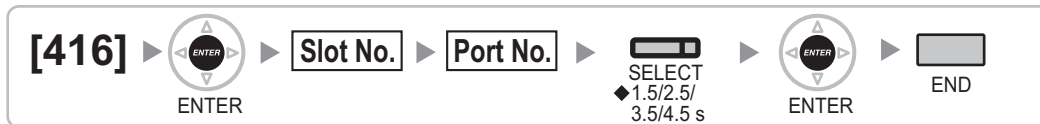


[417] LCOT Flash/Recall Time

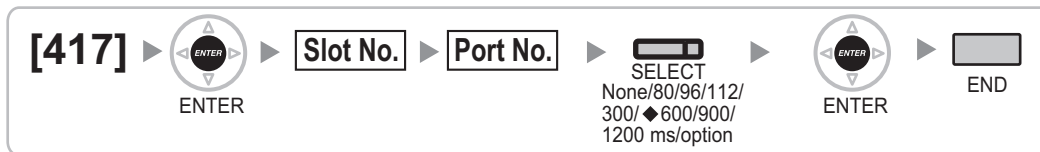

[418] LCOT Disconnect Time



[450] DIL 1:1 Destination

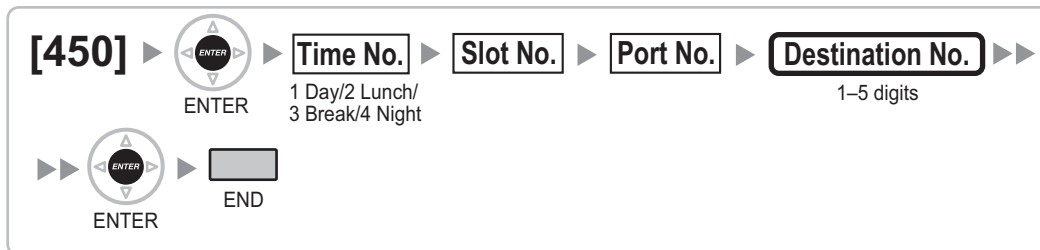


[451] DID Number




[452] DID Name




[453] DID Destination

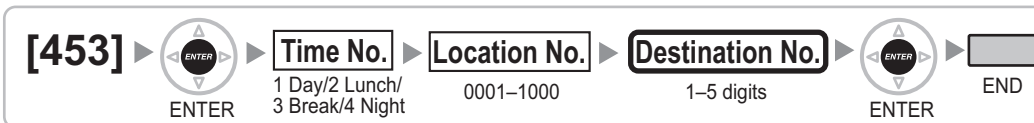


[471] Host PBX Access Code



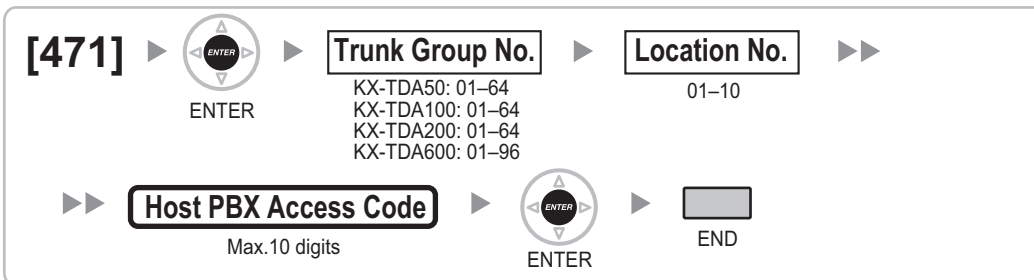


[472] Extension-to-CO Line Call Duration

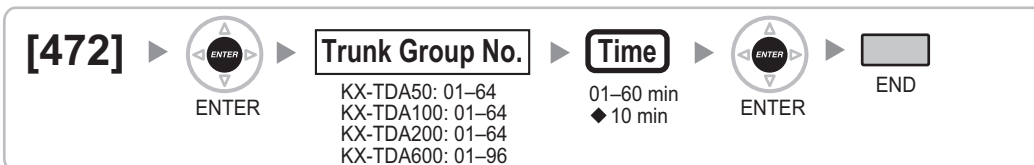


[473] CO-to-CO Line Call Duration

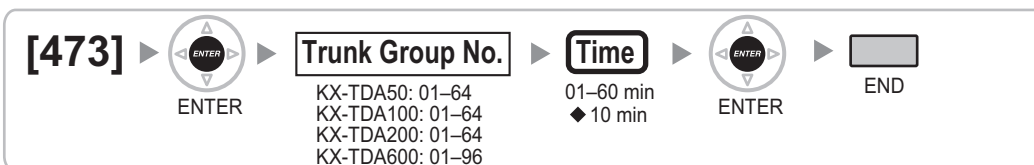

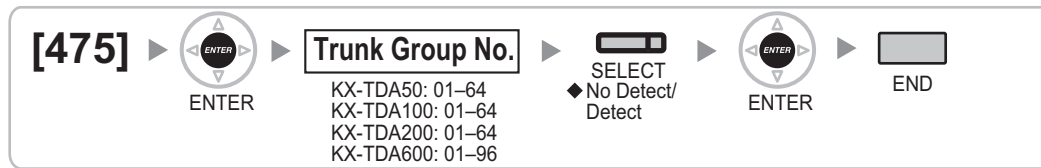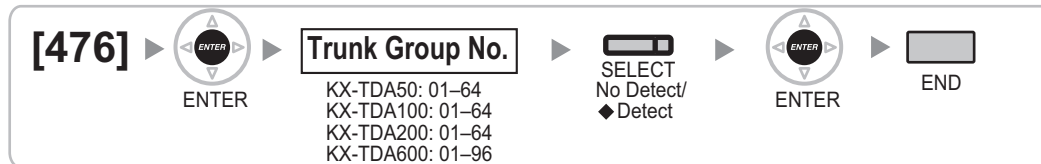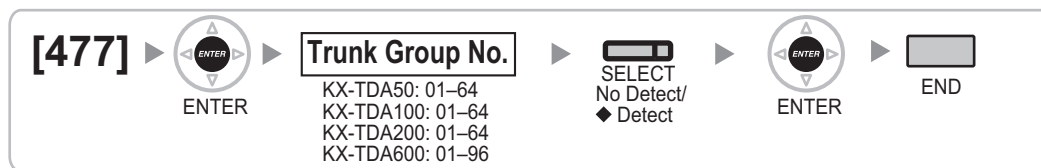
[475] DISA Silence Detection**[476] DISA Continuous Signal Detection****[477] DISA Cyclic Signal Detection****[490] Caller ID Signal Type**

2.1.8 COS Programming


[500] Trunk Group Number

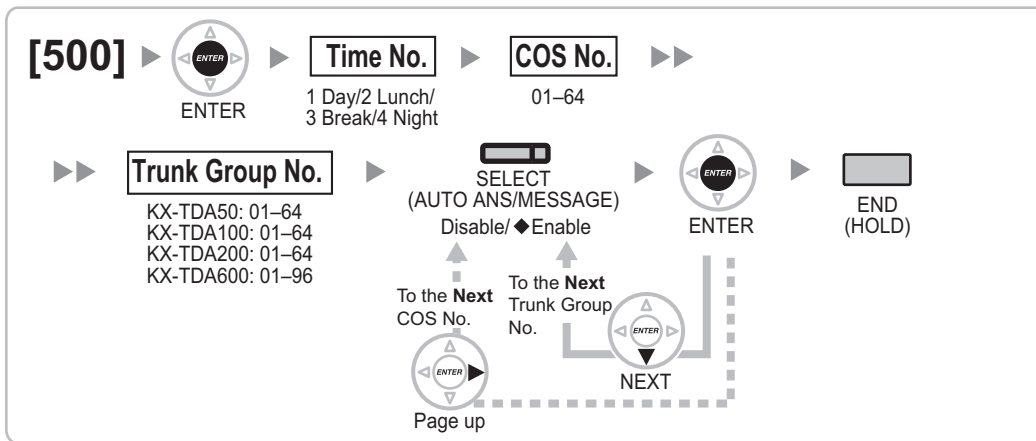

[501] TRS Level

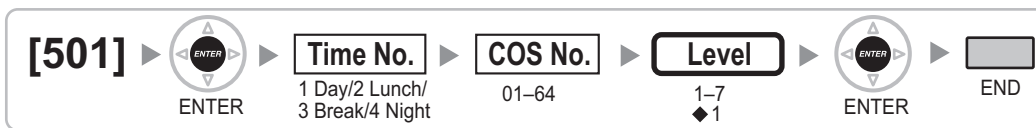

[502] CO Line Call Duration Limitation




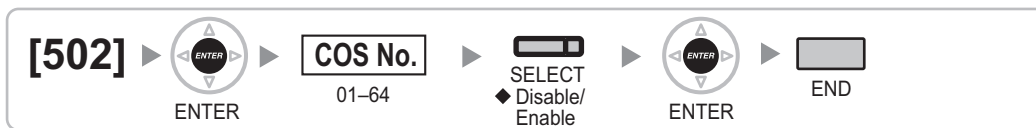


[503] Call Transfer to CO Line




[504] Call Forwarding to CO Line

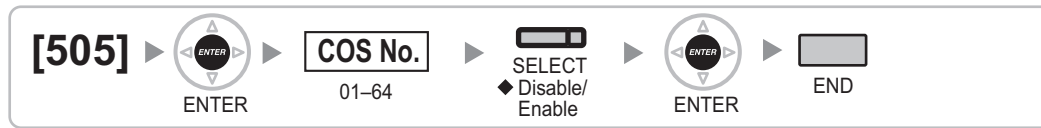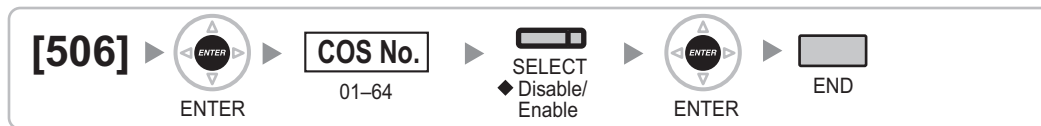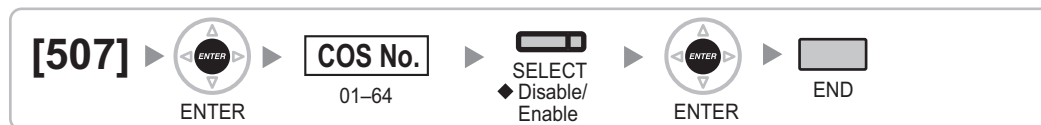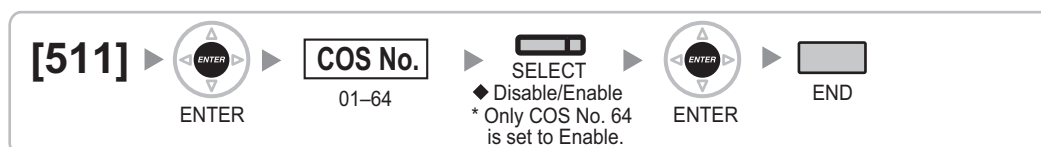

[505] Executive Busy Override**[506] Executive Busy Override Deny****[507] DND Override****[508] Account Code Mode****[509] TRS Level for System Speed Dialing****[510] TRS Level for Extension Dial Lock****[511] Manager Assignment**


[512] Permission for Door Open Access

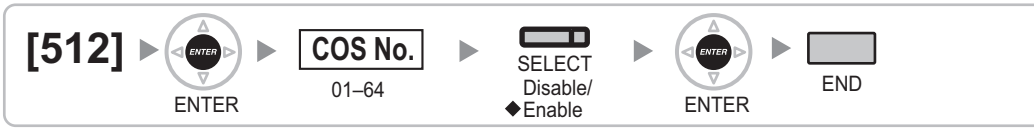


[514] Time Service Manual Switching



[515] Wireless XDP Parallel Mode for Paired Telephone

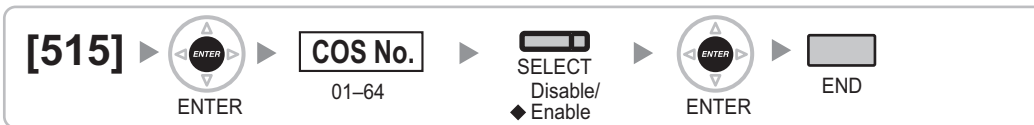


[516] Programming Mode Limitation

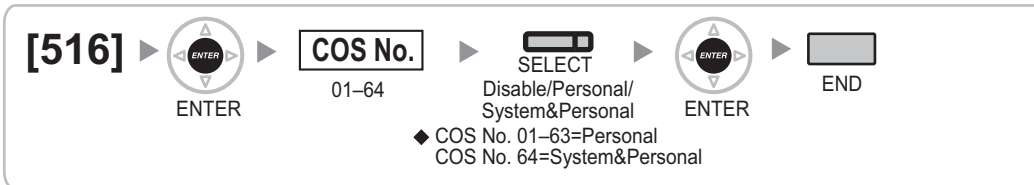


2.1.9 Extension Programming

[600] EXtra Device Port (XDP) Mode

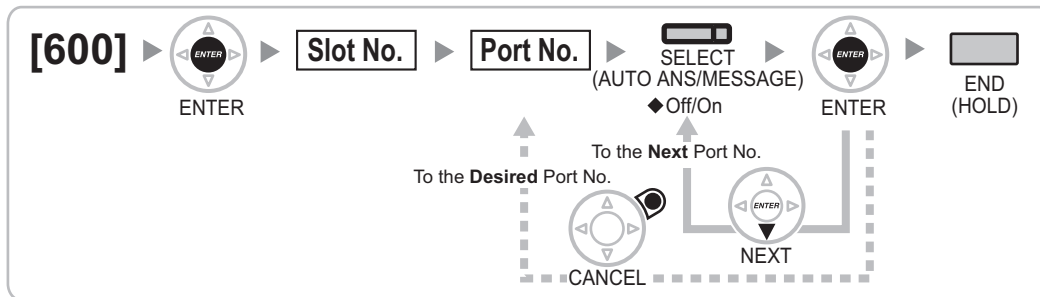

[601] Terminal Device Assignment

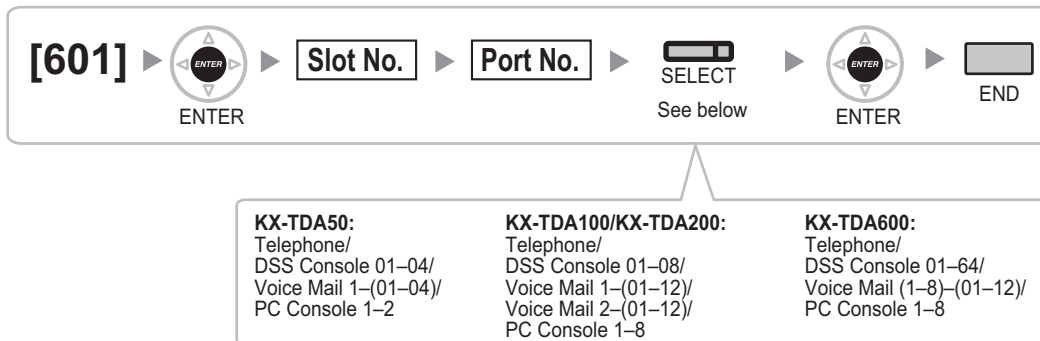


Note

When changing the type of a port for which one or more SDN buttons are set (except when changing between PC Console and Telephone), all SDN buttons customized for that device will be deleted (KX-TDA100/KX-TDA200/KX-TDA600 only).


[602] Class of Service



[603] Extension User Group

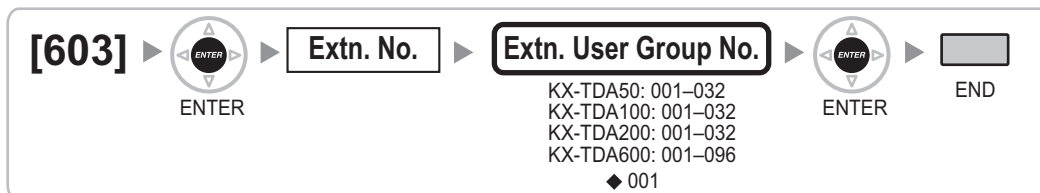

[604] Extension Intercept Destination

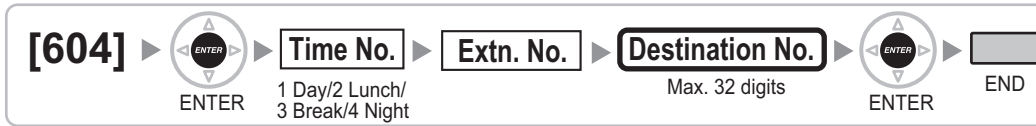


[605] Call Forwarding—No Answer Time




[606] CLIP Number




[620] Incoming Call Distribution Group Member

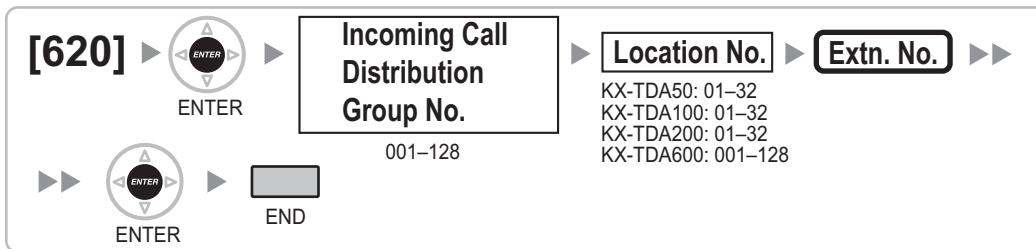


[621] Incoming Call Distribution Group Delayed Ringing

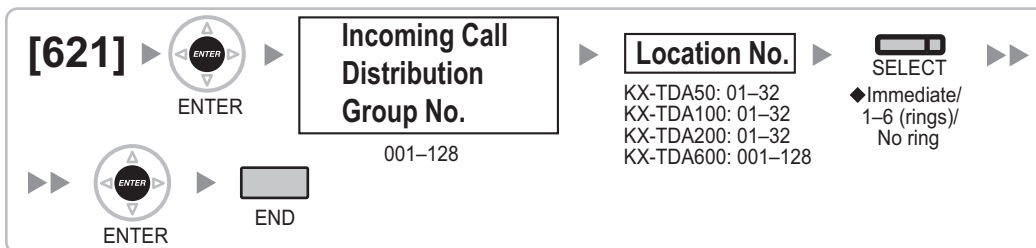

[622] Incoming Call Distribution Group Floating Extension Number

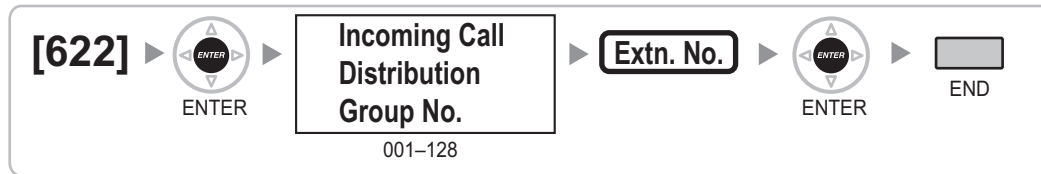


[623] Incoming Call Distribution Group Name

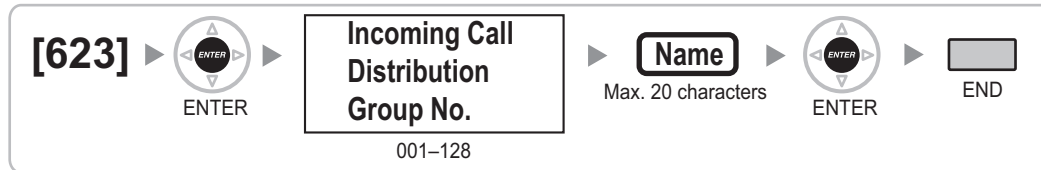

[624] Incoming Call Distribution Group Distribution Method




[625] Destination for Overflow Time Expiration

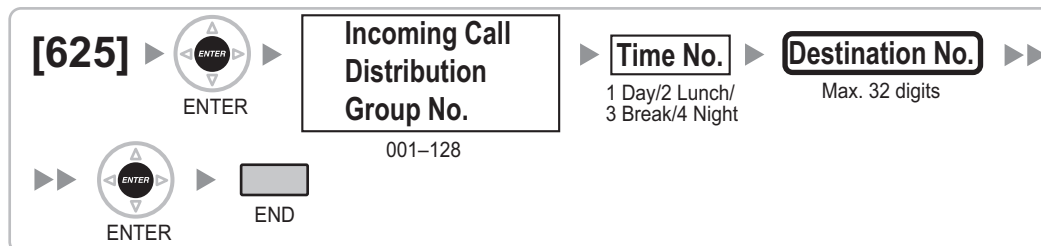


[626] Overflow Time



[627] Destination When All Busy

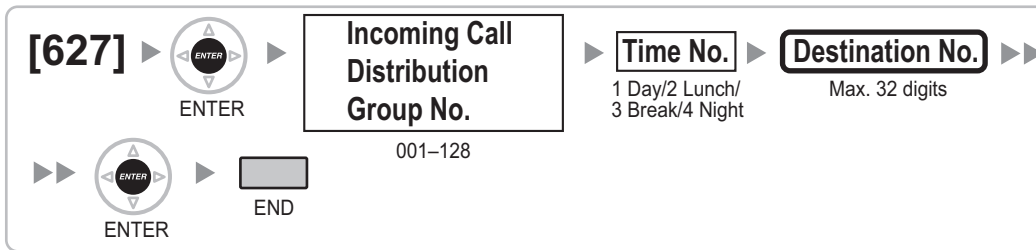


[628] Queuing Call Capacity

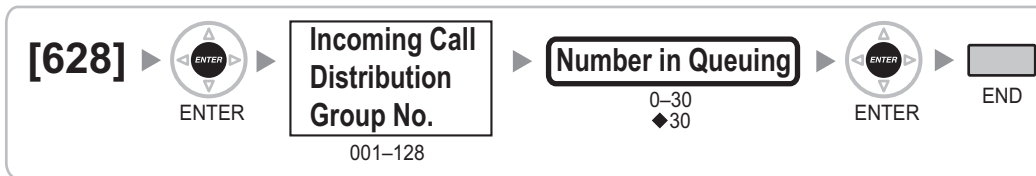


[629] Queuing Hurry-up Level




[630] Queuing Time Table

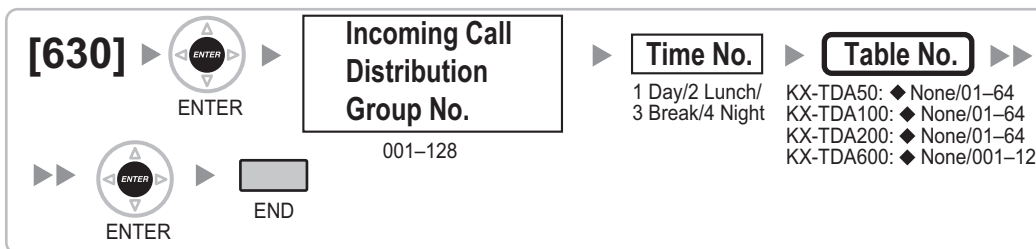


[631] Sequences in Queuing Time Table

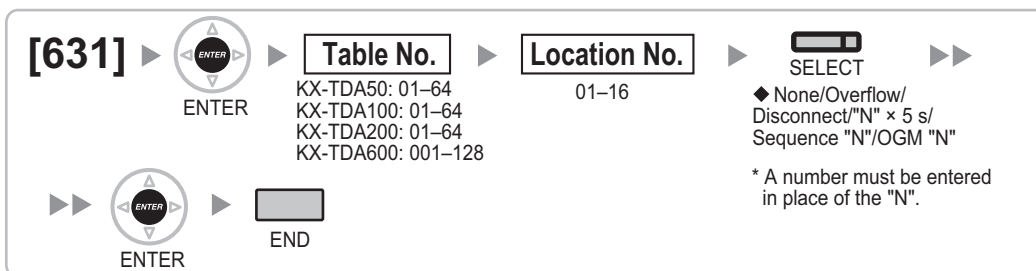


[632] Maximum Number of Agents

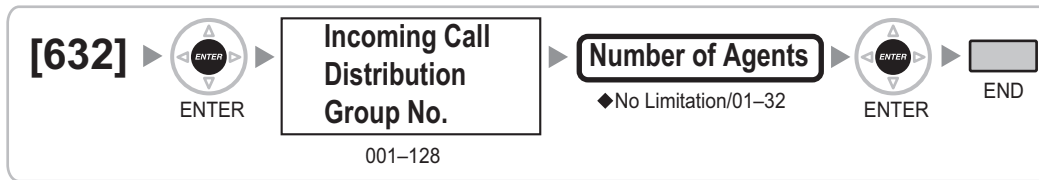


[640] Extension User Groups of a Paging Group

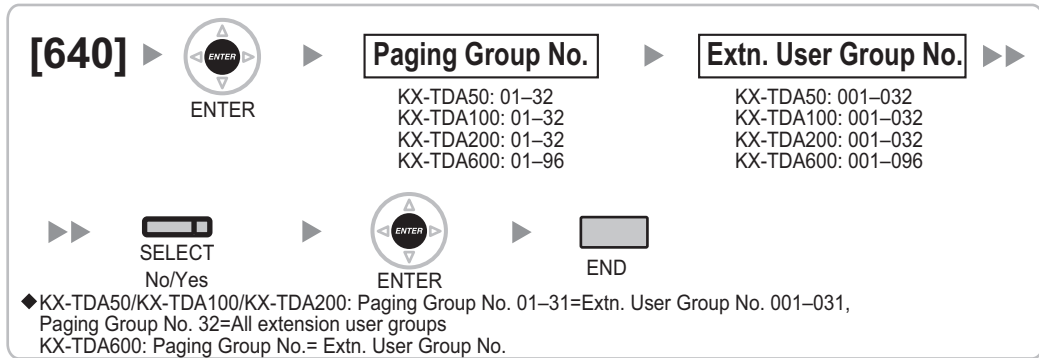


[641] External Pagers of a Paging Group

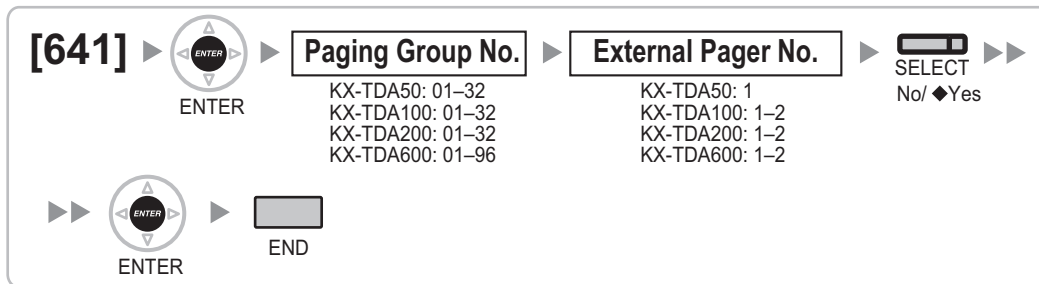


[650] Extension User Groups of a Pickup Group

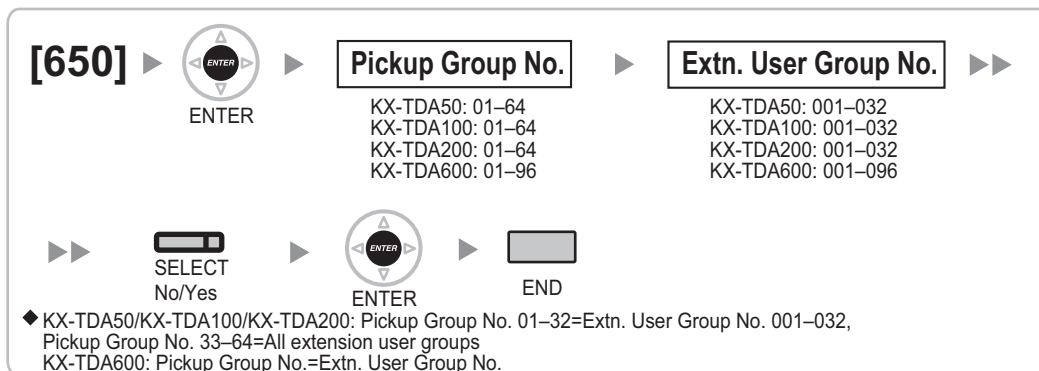


[660] VM Group Floating Extension Number

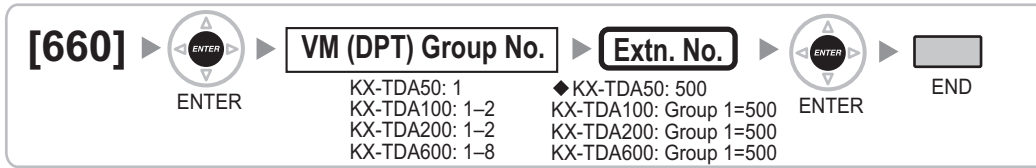


[680] Idle Extension Hunting Type

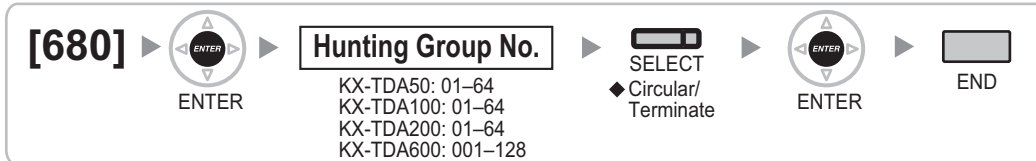

[681] Idle Extension Hunting Group Member

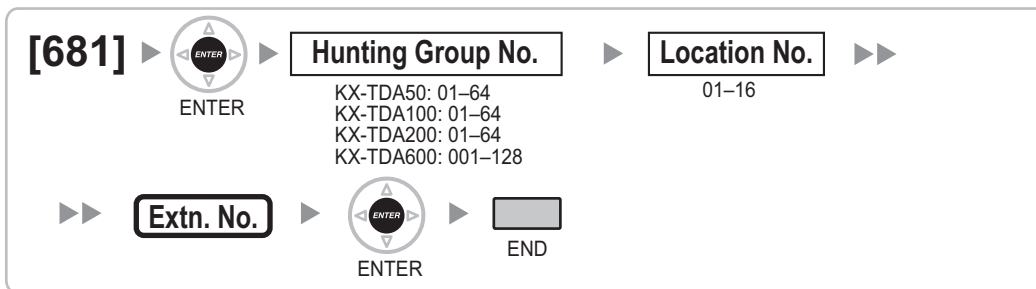


[690] PS Registration

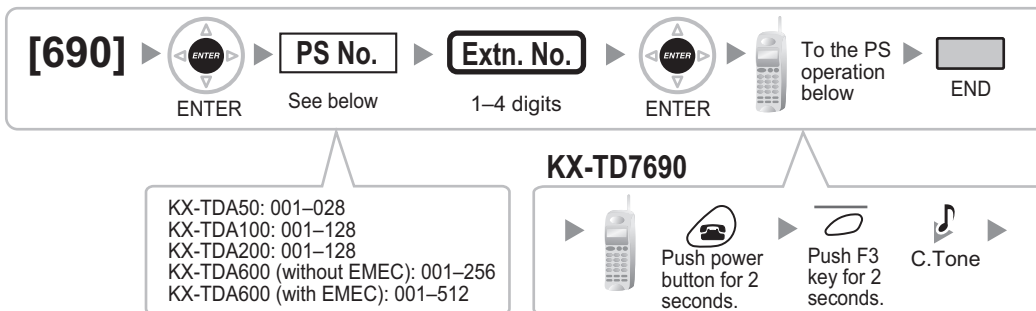


Note

Please refer to the Installation Manual for details about PS registration.


[691] PS Termination

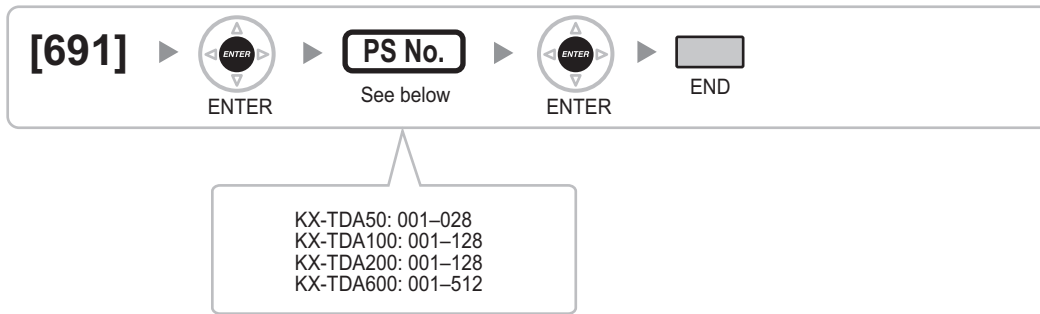

[692] Personal Identification Number (PIN) for PS Registration

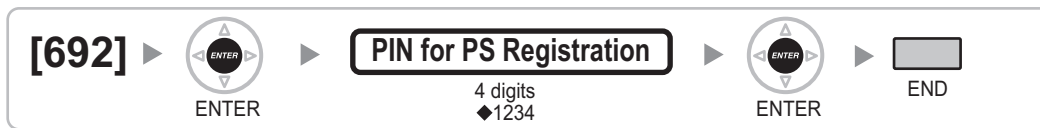


[699] CS Status Reference

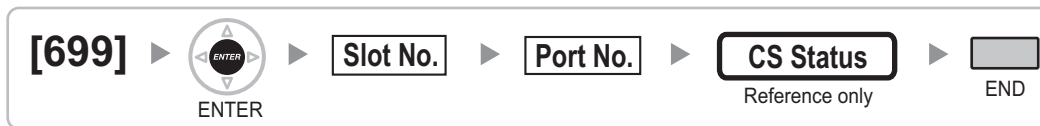

2.1.10 Resource/Interface Programming

[700] External Pager Floating Extension Number


[KX-TDA100/KX-TDA200/KX-TDA600]

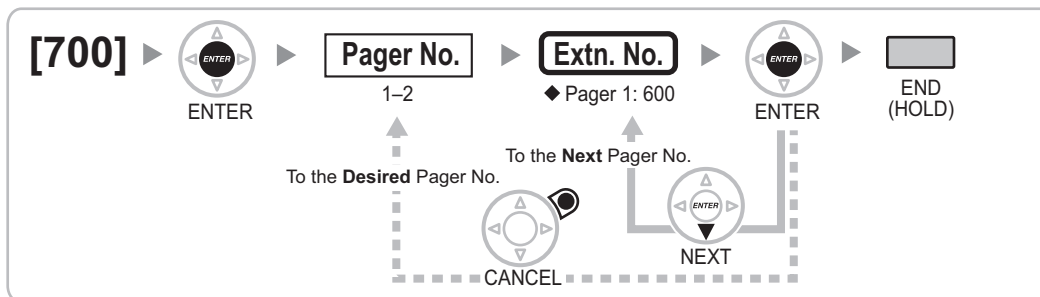


[KX-TDA50]



[710] Music Source Selection for BGM (with the KX-TDA50)/BGM2 (with the KX-TDA100/KX-TDA200/KX-TDA600)

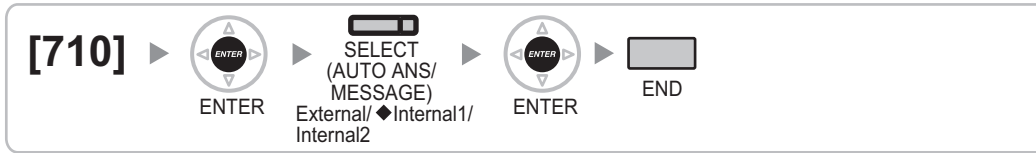

[711] Music on Hold

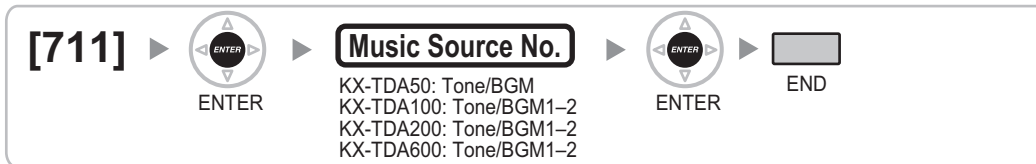


[712] Music for Transfer




[720] Doorphone Call Destination

[KX-TDA100/KX-TDA200/KX-TDA600]

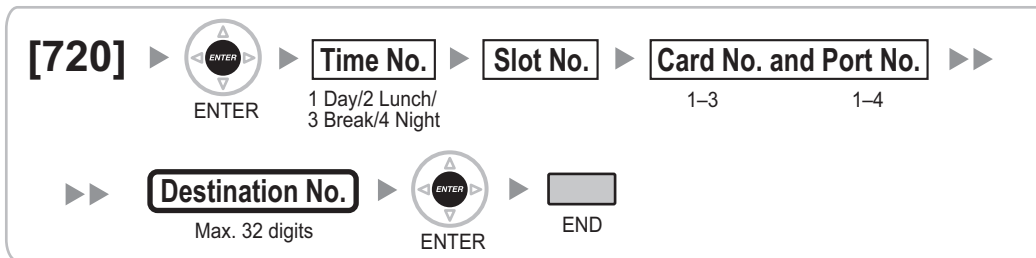


[KX-TDA50]

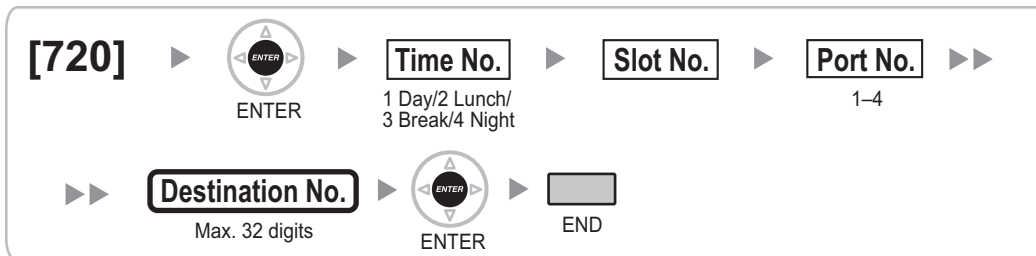

[729] Doorphone Number Reference

[KX-TDA100/KX-TDA200/KX-TDA600]

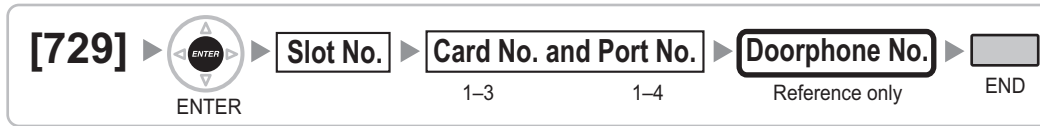

[KX-TDA50]



[730] Outgoing Message (OGM) Floating Extension Number



[731] Outgoing Message (OGM) Name



[732] DISA Security Mode




2.1.11 SMDR & Maintenance Programming

[800] RS-232C Parameter—New Line Code




[800] RS-232C Parameter—Baud Rate

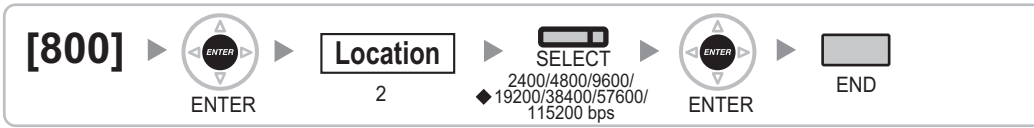

[800] RS-232C Parameter—Word Length




[800] RS-232C Parameter—Parity Bit

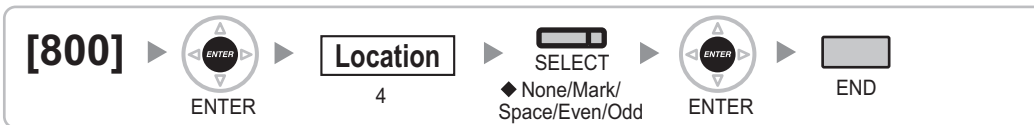

[800] RS-232C Parameter—Stop Bit Length




[801] External Modem Control

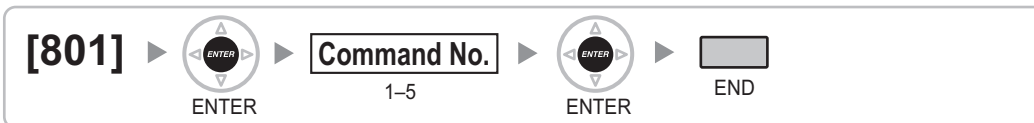


[802] SMDR Page Length




[803] SMDR Skip Perforation

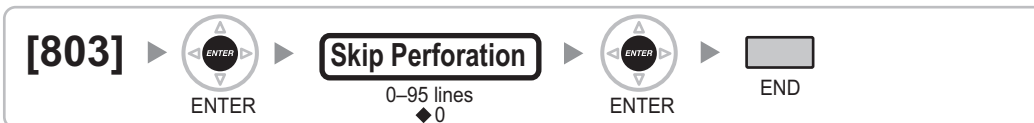

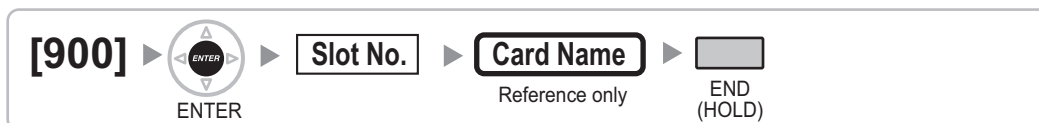[804] SMDR Outgoing Call Printing**[805] SMDR Incoming Call Printing****[810] Remote Programming****[811] Modem Floating Extension Number****[812] ISDN Remote Floating Extension Number (KX-TDA100/KX-TDA200/ KX-TDA600 only)****2.1.12 Card Programming****[900] Slot Card Type Reference**

[901] Slot Card Deletion

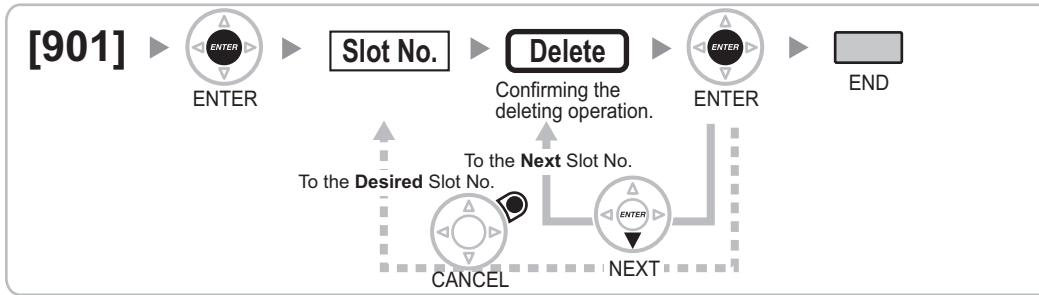


[902] Slot Card Reset



[910] OPB3 Option Card Type Reference (KX-TDA100/KX-TDA200/KX-TDA600 only)



[911] OPB3 Option Card Deletion (KX-TDA100/KX-TDA200/KX-TDA600 only)

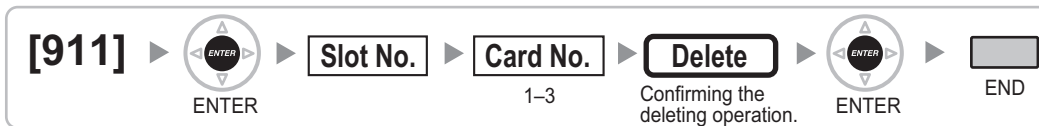

Section 3

Appendix

3.1 Revision History

3.1.1 KX-TDA100/KX-TDA200 PMPR Software File Version 3.2xxx

Changed Contents

- 2.1.2 Maximum Values
- [007] DSS Console Paired Telephone
- [601] Terminal Device Assignment

3.1.2 KX-TDA100/KX-TDA200 PMPR Software File Version 5.0xxx

Changed Contents

- 2.1.1 Programming Instructions
- 2.1.2 Maximum Values
- 2.1.9 Extension Programming

3.1.3 KX-TDA50 PSMPR Software File Version 4.0xxx

Changed Contents

- 2.1.1 Programming Instructions
- 2.1.2 Maximum Values

3.1.4 KX-TDA50 PSMPR Software File Version 5.0xxx

Changed Contents

- 2.1.1 Programming Instructions
- 2.1.5 Timer Programming
- [451] DID Number
- [452] DID Name
- [453] DID Destination
- 2.1.8 COS Programming
- 2.1.10 Resource/Interface Programming

3.2 Feature Programming References

Absent Message

- [008] Absent Message

Feature Manual References

1.1.1 Absent Message

Account Code Entry

- [508] Account Code Mode

Feature Manual References

1.1.2 Account Code Entry

ARS (Automatic Route Selection)

- [320] ARS Mode
- [321] ARS Leading Number
- [322] ARS Routing Plan Table Number
- [325] ARS Exception Number
- [330] ARS Routing Plan Time Table
- [331–346] ARS Routing Plan Table (1–16) (KX-TDA50/KX-TDA100/KX-TDA200 only)
- [347] ARS Routing Plan Table (1–48) (KX-TDA600 only)
- [350] ARS Carrier Name
- [351] ARS Trunk Group for Carrier Access
- [352] ARS Removed Number of Digits for Carrier Access
- [353] ARS Carrier Access Code

Feature Manual References

1.1.3 ARS (Automatic Route Selection)

Call Hold

- [200] Hold Recall Time

Feature Manual References

3.1.2 Call Hold

Call Pickup

- [650] Extension User Groups of a Pickup Group

Feature Manual References

3.1.6 Call Pickup

Call Transfer

- [201] Transfer Recall Time
- [503] Call Transfer to CO Line
- [712] Music for Transfer

Feature Manual References

3.1.8 Call Transfer

Caller ID

- [001] System Speed Dialing Number
- [002] System Speed Dialing Name
- [490] Caller ID Signal Type

Feature Manual References

3.1.1 Caller ID

CLI (Calling Line Identification) Distribution

- [001] System Speed Dialing Number
- [002] System Speed Dialing Name

Feature Manual References

3.1.12 CLI (Calling Line Identification) Distribution

CLIP (Calling Line Identification Presentation)

- [003] Extension Number
- [606] CLIP Number

Feature Manual References

3.1.13 CLIP (Calling Line Identification Presentation)

COS (Class of Service)

- 2.1.8 COS Programming
- [602] Class of Service

Feature Manual References

3.1.19 COS (Class of Service)

CPC (Calling Party Control) Signal Detection

- [413] LCOT CPC Signal Detection Time—Outgoing
- [414] LCOT CPC Signal Detection Time—Incoming

Feature Manual References

3.1.20 CPC (Calling Party Control) Signal Detection

CO Line Access

- [400] LCOT CO Line Connection
- [401] LCOT CO Line Name
- [409] LCOT CO Line Number Reference
- [500] Trunk Group Number

Feature Manual References

3.1.14 CO Line Access

CO Line Call Limitation

- [472] Extension-to-CO Line Call Duration
- [473] CO-to-CO Line Call Duration
- [502] CO Line Call Duration Limitation

Feature Manual References

3.1.15 CO Line Call Limitation

Dial Mode Selection

- [410] LCOT Dialing Mode
- [411] LCOT Pulse Rate
- [412] LCOT DTMF Minimum Duration

Feature Manual References

4.1.2 Dial Mode Selection

DID (Direct Inward Dialing)

- [451] DID Number
- [452] DID Name
- [453] DID Destination

Feature Manual References

4.1.5 DID (Direct Inward Dialing)

DIL (Direct In Line)

- [450] DIL 1:1 Destination

Feature Manual References

4.1.6 DIL (Direct In Line)

DISA (Direct Inward System Access)

- [209] DISA Delayed Answer Time
- [210] DISA CO-to-CO Line Call Prolong Time
- [211] DISA Intercept Time
- [475] DISA Silence Detection
- [476] DISA Continuous Signal Detection
- [477] DISA Cyclic Signal Detection
- [604] Extension Intercept Destination
- [730] Outgoing Message (OGM) Floating Extension Number
- [731] Outgoing Message (OGM) Name
- [732] DISA Security Mode

Feature Manual References

4.1.7 DISA (Direct Inward System Access)

DND (Do Not Disturb)

- [507] DND Override

Feature Manual References

4.1.9 DND (Do Not Disturb)

Door Open

- [207] Door Unlock Time
- [512] Permission for Door Open Access

Feature Manual References

4.1.10 Door Open

Doorphone Call

- [720] Doorphone Call Destination
- [729] Doorphone Number Reference

Feature Manual References

4.1.11 Doorphone Call

EFA (External Feature Access)

- [417] LCOT Flash/Recall Time

Feature Manual References

5.1.1 EFA (External Feature Access)

Emergency Call

- [304] Emergency Number

Feature Manual References

5.1.2 Emergency Call

Executive Busy Override

- [505] Executive Busy Override
- [506] Executive Busy Override Deny

Feature Manual References

5.1.3 Executive Busy Override

Extension Dial Lock

- [510] TRS Level for Extension Dial Lock

Feature Manual References

5.1.4 Extension Dial Lock

Extension PIN (Personal Identification Number)

- [005] Extension Personal Identification Number (PIN)

Feature Manual References

5.1.6 Extension PIN (Personal Identification Number)

Extension Port Configuration

- [007] DSS Console Paired Telephone
- [600] EXtra Device Port (XDP) Mode

Feature Manual References

5.1.7 Extension Port Configuration

Flash/Recall/Terminate

- [418] LCOT Disconnect Time

Feature Manual References

6.1.2 Flash/Recall/Terminate

Flexible Numbering/Fixed Numbering

- [100] Flexible Numbering

Feature Manual References

6.1.4 Flexible Numbering/Fixed Numbering

Floating Extension

- [623] Incoming Call Distribution Group Name
- [660] VM Group Floating Extension Number
- [700] External Pager Floating Extension Number
- [730] Outgoing Message (OGM) Floating Extension Number
- [731] Outgoing Message (OGM) Name
- [811] Modem Floating Extension Number
- [812] ISDN Remote Floating Extension Number (KX-TDA100/KX-TDA200/KX-TDA600 only)

Feature Manual References

6.1.5 Floating Extension

FWD (Call Forwarding)

- [472] Extension-to-CO Line Call Duration
- [473] CO-to-CO Line Call Duration
- [504] Call Forwarding to CO Line
- [605] Call Forwarding—No Answer Time

Feature Manual References

6.1.6 FWD (Call Forwarding)

Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)

- [471] Host PBX Access Code

Feature Manual References

8.1.5 Host PBX Access Code (Access Code to the Telephone Company from a Host PBX)

Hot Line

- [204] Hot Line Waiting Time

Feature Manual References

8.1.6 Hot Line

ICD Group Features

- [620] Incoming Call Distribution Group Member
- [621] Incoming Call Distribution Group Delayed Ringing
- [622] Incoming Call Distribution Group Floating Extension Number
- [623] Incoming Call Distribution Group Name
- [624] Incoming Call Distribution Group Distribution Method
- [625] Destination for Overflow Time Expiration
- [626] Overflow Time
- [627] Destination When All Busy
- [628] Queuing Call Capacity
- [629] Queuing Hurry-up Level
- [630] Queuing Time Table
- [631] Sequences in Queuing Time Table
- [632] Maximum Number of Agents

Feature Manual References

9.1.1 ICD GROUP FEATURES

ICD Group Features—Group Call Distribution

- [621] Incoming Call Distribution Group Delayed Ringing
- [624] Incoming Call Distribution Group Distribution Method
- [632] Maximum Number of Agents

Feature Manual References

9.1.2 ICD Group Features—Group Call Distribution

ICD Group Features—Outside Destinations

- [620] Incoming Call Distribution Group Member
- [621] Incoming Call Distribution Group Delayed Ringing
- [622] Incoming Call Distribution Group Floating Extension Number
- [624] Incoming Call Distribution Group Distribution Method
- [629] Queuing Hurry-up Level

Feature Manual References

9.1.4 ICD Group Features—Outside Destinations

ICD Group Features—Overflow

- [625] Destination for Overflow Time Expiration
- [626] Overflow Time
- [627] Destination When All Busy

- [628] Queuing Call Capacity
- [632] Maximum Number of Agents

Feature Manual References

9.1.5 ICD Group Features—Overflow

ICD Group Features—Queuing

- [628] Queuing Call Capacity
- [629] Queuing Hurry-up Level
- [630] Queuing Time Table
- [631] Sequences in Queuing Time Table
- [632] Maximum Number of Agents

Feature Manual References

9.1.6 ICD Group Features—Queuing

Idle Extension Hunting

- [680] Idle Extension Hunting Type
- [681] Idle Extension Hunting Group Member

Feature Manual References

9.1.9 Idle Extension Hunting

Intercept Routing

- [203] Intercept Time
- [604] Extension Intercept Destination
- [625] Destination for Overflow Time Expiration

Feature Manual References

9.1.11 Intercept Routing

Intercept Routing—No Destination

- [006] Operator Assignment

Feature Manual References

9.1.12 Intercept Routing—No Destination

Intercom Call

- [003] Extension Number
- [004] Extension Name

Feature Manual References

9.1.13 Intercom Call

Line Preference—Outgoing

- [103] Idle Line Access (Local Access)
- [500] Trunk Group Number

Feature Manual References

10.1.3 Line Preference—Outgoing

Manager Features

- [112] Manager Password
- [511] Manager Assignment

Feature Manual References

11.1.1 Manager Features

Music on Hold

- [710] Music Source Selection for BGM (with the KX-TDA50)/BGM2 (with the KX-TDA100/KX-TDA200/KX-TDA600)
- [711] Music on Hold

Feature Manual References

11.1.4 Music on Hold

OGM (Outgoing Message)

- [631] Sequences in Queuing Time Table
- [730] Outgoing Message (OGM) Floating Extension Number

Feature Manual References

12.1.2 OGM (Outgoing Message)

Operator Features

- [006] Operator Assignment

Feature Manual References

12.1.5 Operator Features

Paging

- [640] Extension User Groups of a Paging Group
- [641] External Pagers of a Paging Group

Feature Manual References

13.1.1 Paging

Paralleled Telephone

- [600] EXtra Device Port (XDP) Mode

Feature Manual References

13.1.2 Paralleled Telephone

Pause Insertion

- [416] LCOT Pause Time

Feature Manual References

13.1.4 Pause Insertion

PC Console/PC Phone

- [601] Terminal Device Assignment

Feature Manual References

13.1.5 PC Console/PC Phone

Private Network Features

- [453] DID Destination
- [500] Trunk Group Number

Feature Manual References

13.1.13 PRIVATE NETWORK FEATURES

Private Network Features—NDSS (Network Direct Station Selection)

- [511] Manager Assignment

Feature Manual References

13.1.15 Private Network Features—NDSS (Network Direct Station Selection)

Private Network Features—PS Roaming by Network ICD Group

- [620] Incoming Call Distribution Group Member
- [622] Incoming Call Distribution Group Floating Extension Number
- [624] Incoming Call Distribution Group Distribution Method

Feature Manual References

13.1.17 Private Network Features—PS Roaming by Network ICD Group

Private Network Features—QSIG—CLIP/COLP (Calling/Connected Line Identification Presentation) and CNIP/CONP (Calling/Connected Name Identification Presentation)

- [003] Extension Number
- [004] Extension Name

Feature Manual References

13.1.21 Private Network Features—QSIG—CLIP/COLP (Calling/Connected Line Identification Presentation) and CNIP/CONP (Calling/Connected Name Identification Presentation)

PS Connection

- [690] PS Registration
- [691] PS Termination
- [692] Personal Identification Number (PIN) for PS Registration

Feature Manual References

13.1.24 PS Connection

PS Directory

- [001] System Speed Dialing Number
- [002] System Speed Dialing Name
- [004] Extension Name

Feature Manual References

13.1.25 PS Directory

PS Ring Group

- [620] Incoming Call Distribution Group Member

Feature Manual References

13.1.27 PS Ring Group

PT Programming

- 2.1 PT Programming
- [516] Programming Mode Limitation

Feature Manual References

13.1.28 PT Programming

Redial, Last Number

- [205] Automatic Redial Repeat Times (KX-TDA100/KX-TDA200/KX-TDA600 only)

Feature Manual References

15.1.1 Redial, Last Number

SMDR (Station Message Detail Recording)

- [800] RS-232C Parameter—New Line Code
- [800] RS-232C Parameter—Baud Rate
- [800] RS-232C Parameter—Word Length
- [800] RS-232C Parameter—Parity Bit
- [800] RS-232C Parameter—Stop Bit Length
- [802] SMDR Page Length
- [803] SMDR Skip Perforation
- [804] SMDR Outgoing Call Printing
- [805] SMDR Incoming Call Printing

Feature Manual References

16.1.1 SMDR (Station Message Detail Recording)

Special Carrier Access Code

- [303] Special Carrier Access Code

Feature Manual References

16.1.2 Special Carrier Access Code

Speed Dialing, System

- [001] System Speed Dialing Number
- [002] System Speed Dialing Name
- [509] TRS Level for System Speed Dialing

Feature Manual References

16.1.4 Speed Dialing, System

TAFAS (Trunk Answer From Any Station)

- [700] External Pager Floating Extension Number

Feature Manual References

17.1.2 TAFAS (Trunk Answer From Any Station)

Tenant Service

- [001] System Speed Dialing Number
- [006] Operator Assignment
- [320] ARS Mode
- [711] Music on Hold

Feature Manual References

17.1.3 Tenant Service

Time Service

- [101] Time Service Switching Mode
- [102] Time Service Starting Time
- [514] Time Service Manual Switching

Feature Manual References

17.1.5 Time Service

TRS (Toll Restriction)

- [300] TRS Override by System Speed Dialing
- [301] TRS Denied Code
- [302] TRS Exception Code
- [501] TRS Level
- [509] TRS Level for System Speed Dialing
- [602] Class of Service

Feature Manual References

17.1.6 TRS (Toll Restriction)

Upgrading the Software

- [190] Main Processing (MPR) Software Version Reference

Feature Manual References

18.1.1 Upgrading the Software

Verification Code Entry

- [120] Verification Code
- [121] Verification Code Name
- [122] Verification Code Personal Identification Number (PIN)
- [123] Verification Code COS Number

Feature Manual References

19.1.1 Verification Code Entry

Virtual PS

- [690] PS Registration

Feature Manual References

19.1.2 Virtual PS

Voice Mail (VM) Group

- [601] Terminal Device Assignment
- [660] VM Group Floating Extension Number

Feature Manual References

19.1.3 Voice Mail (VM) Group

Voice Mail DPT (Digital) Integration

- [201] Transfer Recall Time

Feature Manual References

19.1.4 Voice Mail DPT (Digital) Integration

Walking COS

- [005] Extension Personal Identification Number (PIN)

Feature Manual References

20.1.1 Walking COS

Walking Extension

- [007] DSS Console Paired Telephone

Feature Manual References

20.1.2 Walking Extension

Wireless XDP Parallel Mode

- [515] Wireless XDP Parallel Mode for Paired Telephone

Feature Manual References

20.1.4 Wireless XDP Parallel Mode

**Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America**

One Panasonic Way, Secaucus, New Jersey 07094

<http://www.panasonic.com/csd>

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© Panasonic Communications Co., Ltd. 2006